



# Alpha Plus

## User Guide



# Contents

<b>Contents</b>	<b>i</b>
<b>1 Introduction</b>	<b>1</b>
1.1 Features . . . . .	1
1.2 Accessories . . . . .	2
1.3 The Remote Control . . . . .	3
1.4 Getting Started . . . . .	5
1.5 The Apps Screen . . . . .	6
Customizing the Apps Screen . . . . .	7
<b>2 Installation</b>	<b>8</b>
2.1 Aerial Connections . . . . .	9
Satellite Dish Connection . . . . .	9
Aerial Connection . . . . .	9
2.2 TV Connections . . . . .	9
HDMI Connection . . . . .	10
Component Connection . . . . .	11
SCART Connection . . . . .	11
Composite Connection . . . . .	12
2.3 AV Receiver Connection . . . . .	12
2.4 Network Connections . . . . .	13
<b>3 Scanning Channels</b>	<b>14</b>
3.1 Understanding Satellite TV . . . . .	14
3.2 Satellite Dish Settings . . . . .	15
LNB Settings . . . . .	15
Unicable Settings . . . . .	17
3.3 Using a Motorized Dish . . . . .	17

	Using DiSEqC 1.2 . . . . .	18
	Using USALS . . . . .	19
3.4	Scanning Satellite TV Channels . . . . .	20
	Scanning for Every Channel . . . . .	21
	Scanning a Specific Transponder . . . . .	21
	Scanning for One Channel . . . . .	22
3.5	Scanning Terrestrial TV Channels . . . . .	22
3.6	Scanning Cable TV Channels . . . . .	23
<b>4</b>	<b>Watching TV</b>	<b>24</b>
4.1	Channel List . . . . .	24
	Channel List Preferences . . . . .	25
4.2	TV Programme Guide . . . . .	26
	Programme Guide Preferences . . . . .	27
4.3	Controlling Audio . . . . .	28
4.4	Displaying Subtitles . . . . .	28
4.5	Watching Two Channels Simultaneously . . . . .	29
4.6	Viewing Teletext . . . . .	29
4.7	Watching Pay Channels . . . . .	29
4.8	Watching Subchannels . . . . .	30
4.9	Setting Up Timers . . . . .	31
	Wake-Up Timer . . . . .	31
	Sleep Timer . . . . .	31
4.10	Managing Channels . . . . .	31
	Organizing the Channel List . . . . .	31
	Organizing the Favourites List . . . . .	32
4.11	HbbTV . . . . .	33
<b>5</b>	<b>Recording TV</b>	<b>34</b>
5.1	Recording TV Programmes . . . . .	34
	Scheduling TV Recordings Using the Programme Guide . . . . .	34
	Manually Scheduling TV Recordings . . . . .	35
5.2	Time-Shifting . . . . .	35

5.3	Playing Recordings . . . . .	36
5.4	Recording Preferences . . . . .	36
<b>6</b>	<b>Playing Media Files</b>	<b>39</b>
6.1	Managing Storage Devices . . . . .	39
6.2	Managing Files . . . . .	40
6.3	Playing Recordings and Videos . . . . .	41
6.4	Viewing Photos . . . . .	42
6.5	Playing Music . . . . .	43
6.6	Playing Media files from Other Devices . . . . .	43
	Accessing Other Devices . . . . .	44
	Allowing Other Devices to Access the Receiver . . . . .	44
<b>7</b>	<b>Apps</b>	<b>45</b>
7.1	Webzeal . . . . .	45
	Viewing a Webpage . . . . .	45
	Navigating Webpages . . . . .	46
	Bookmarks . . . . .	46
	Entering Text . . . . .	47
7.2	Free TV+ . . . . .	47
	Playing Videos . . . . .	48
	Free TV+ Preferences . . . . .	48
7.3	iTV+ . . . . .	48
7.4	iRadio+ . . . . .	49
7.5	Weather . . . . .	50
7.6	TV Portal+ . . . . .	50
7.7	Sync Player . . . . .	51
7.8	T Apps . . . . .	51
<b>8</b>	<b>Preference Settings</b>	<b>53</b>
8.1	Language Settings . . . . .	53
	Using Different Fonts . . . . .	53
8.2	Network Settings . . . . .	54

Proxy Server Settings . . . . .	54
DDNS Settings . . . . .	54
8.3 Clock Settings . . . . .	55
8.4 Audio and Video Settings . . . . .	55
8.5 On-Screen Display Settings . . . . .	56
8.6 Parental Control . . . . .	57
8.7 Maintaining the Digital TV Receiver . . . . .	58
8.8 Updating the Digital TV Receiver . . . . .	59
Online Update . . . . .	59
<b>A Universal Remote Control</b>	<b>60</b>
<b>B Legal Notices</b>	<b>82</b>
<b>Index</b>	<b>84</b>

# 1 Introduction

## 1.1 Features

Beyond simply receiving satellite signals, this digital TV receiver has many convenient and advanced features:

- Users can watch cable and terrestrial channels as well as satellite stations.
- This receiver has four slots for CA modules and pay-TV cards. Users can use CI+ modules as well as conventional CA modules. See *Watching Pay Channels* on page 29.
- Users can use the built-in hard drive or removable storage devices to record TV programmes. It is possible to schedule this receiver to record not only a single TV programme but also every episode of a series using the programme guide. See *Recording TV* on page 34.
- Users can pause and resume a live programme. See *Time-Shifting* on page 35.
- Under ideal conditions, users can watch 2 different channels at the same time while recording 3 other channels. It is also possible to watch a live channel while playing a recorded programme. See *Watching Two Channels Simultaneously* on page 29.
- This receiver can play many kinds of media files, including photos, music, and videos. See *Playing Media Files* on page 39.
- This receiver can play media files from other devices, such as computers and network-attached storages. See *Playing Media files from Other Devices* on page 43.
- This receiver provides a variety of apps, including YouTube. See *The Apps Screen* on page 6.

## 1.2 Accessories


The following accessories are included with the digital TV receiver.




Remote control




Batteries

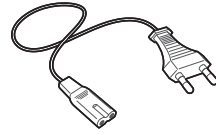

Power cord

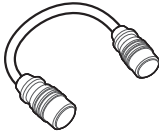

Loop-through cable

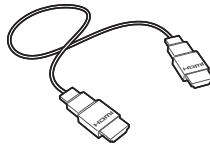

HDMI cable




Wi-Fi dongle



Use the Wi-Fi dongle to connect the receiver to a wireless network. See Network Connections on page 13.



# 1.3 The Remote Control

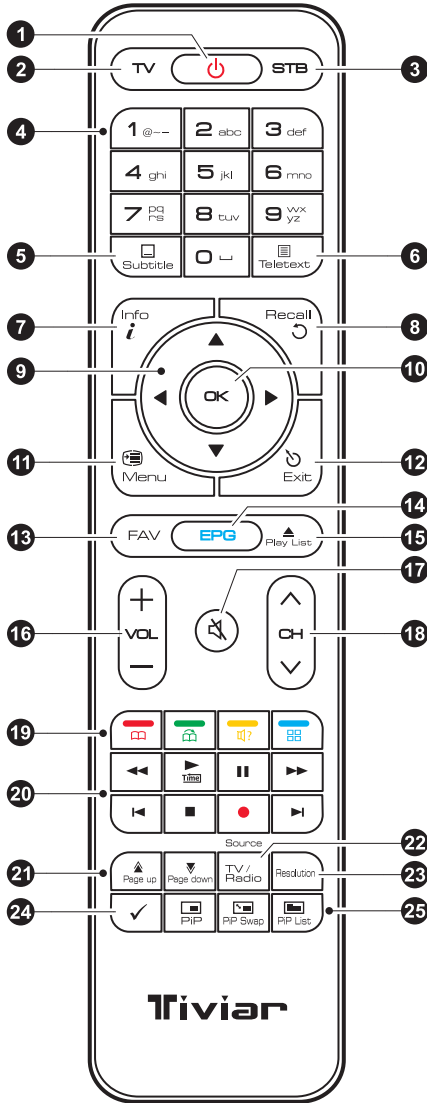Use the remote control to control the digital TV receiver. Make sure that batteries are installed correctly in the remote control.




- 1 : Turn the digital TV receiver on or off.
- 2 TV: Switch the remote control to TV control mode.
- 3 STB: Switch the remote control to receiver control mode.
- 4 Use the numeric buttons to enter numbers.
- 5 Subtitle: Display subtitles. See *Displaying Subtitles* on page 28.
- 6 Teletext: Display teletext pages. See *Viewing Teletext* on page 29.
- 7 Info: Display information about the current programme.
- 8 Recall: Display the list of recently-viewed channels.
- 9 Use these navigation buttons to navigate the menus and interactive screens.
- 10 OK: Select an item. In addition, use this button to display the channel list. See *Channel List* on page 24.
- 11 Menu: Display apps. See *The Apps Screen* on page 6. In addition, use this button to return to the higher menu level.
- 12 Exit: Return to the previous screen or close the current list or dialogue box.
- 13 FAV: Display the list of favourite channels.
- 14 EPG: Display the programme guide. See *TV Programme Guide* on page 26.
- 15 Play List: Display the list of files stored in the built-in hard drive or in a removable storage device. See *Playing Media Files* on page 39.
- 16 Use these volume buttons to adjust the volume.
- 17 : Mute the sound.
- 18 Use these channel buttons to change channels.
- 19 These colour buttons perform different functions, depending on what the digital TV receiver is currently doing.
- 20 Use these buttons to control recording and playback. See *Recording TV* on page 34 and *Playing Media Files* on page 39.

- 21 Use these buttons to scroll lists.
- 22 **TV/Radio:** Switch between TV channels and radio stations.
- 23 **Resolution:** Change the picture resolution.
- 24 ✓ : This button performs different functions, depending on the function the receiver is currently doing.
- 25 Use these buttons to watch two different channels at the same time. See *Watching Two Channels Simultaneously* on page 29.

## 1.4 Getting Started

Install the digital TV receiver properly, referring to *Installation* on page 8.

Turn on the main power switch on the rear of the receiver, and press the power button  on the remote control to turn on the receiver.

When turning on the receiver for the first time, the initial setup process automatically starts. Follow the on-screen instructions to finish the process. At each step, either make a choice or skip the step:

1. Choose a language for the user interface.
2. Configure the network settings. See *Network Connections* on page 13 and *Network Settings* on page 54.
3. Install add-ons to internet-related apps, such as Free TV+ and iRadio+, when an internet connection is available. Additionally, determine whether to restore the receiver using the stored settings and channels, if there is any backup data.
4. Set the clock. See *Clock Settings* on page 55.
5. Choose a broadcast media type and scan for channels. See *Scanning Channels* on page 14.

## 1.5 The Apps Screen

Pressing the Menu button displays app icons at the bottom of the screen. To view more apps, press the up navigation button.



To access the customary menus, select **Settings**.

Some apps allow users to quickly access frequently-used setting menus and functions.

- **Back-Up:** Open the **Settings > System Tools > Data Transfer** menu. See *Maintaining the Digital TV Receiver* on page 58.
- **CH Edit:** Open the **Settings > System Tools > Service List Manager** menu. See *Managing Channels* on page 31.
- **Download:** See *Online Update* on page 59.
- **EPG:** Open the programme guide. See *TV Programme Guide* on page 26.
- **M Client:** See *Accessing Other Devices* on page 44.
- **M Server:** See *Allowing Other Devices to Access the Receiver* on page 44.
- **Movie:** Display the list of videos stored on the storage device most recently accessed. See *Playing Media Files* on page 39.
- **Music:** Display the list of songs stored on the storage device most re-

cently accessed. See [Playing Media Files](#) on page 39.

- **Network:** Select this to open the **Settings > Installation > Network Setting** menu. See [Network Settings](#) on page 54.
- **Photos:** Display the list of photos stored on the storage device most recently accessed. See [Playing Media Files](#) on page 39.
- **Recordings:** Display the list of TV recordings stored on the storage device most recently accessed. See [Playing Media Files](#) on page 39.
- **Schedule:** Open the **Settings > System Tools > Schedule** menu. See [Manually Scheduling TV Recordings](#) on page 35.
- **Storage:** Open the **Settings > System Tools > Storage Manager** menu. See [Managing Storage Devices](#) on page 39.
- **YouTube:** See [Free TV+](#) on page 47.

For other apps, see [Apps](#) on page 45.

## Customizing the Apps Screen

Users can rearrange app icons. Place the focus on an icon and press the red button. Move the icon to a new location using the navigation buttons, and then press the **OK** button to fix it in place.

Put frequently-used apps in the bottom line for faster access.


## 2 Installation

Install the digital TV receiver, limited by the specifications shown in the table below.

Input voltage	AC 100–250 V, 50/60 Hz
Maximum power consumption	55 W when in operation 1 W when in standby mode
Size	340 mm × 60 mm × 2450 mm
Weight	2 kg with no hard drive
Operating temperature	32–113 °F, 0–45 °C
Storage temperature	14–158 °F, -10–70 °C

This digital TV receiver has a variety of connectors:


- Aerial connectors
- AV connectors for a TV and an AV receiver
- USB ports for removable storage devices and the Wi-Fi dongle
- An e-SATA port for a removable hard drive

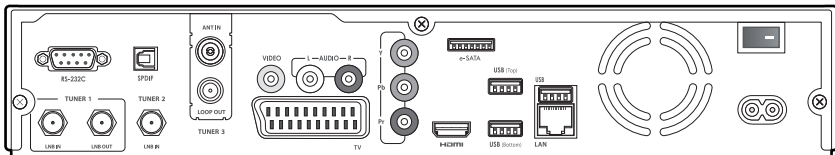

The RS-232C port may be used only by an engineer for installation or service.


## 2.1 Aerial Connections

### Satellite Dish Connection

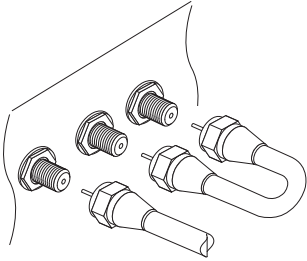

Connect the cable from the satellite dish to LNB IN of TUNER 1. In most situations, connect LNB OUT of TUNER 1 to LNB IN of TUNER 2 using the loop-through cable. Only when two satellite dishes are available without any multi-dish switch, users should connect the cable from the other dish to LNB IN of TUNER 2.

### Aerial Connection

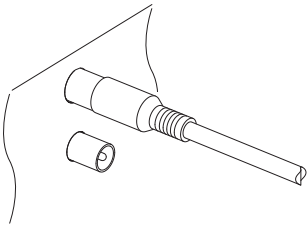

Connect the cable from the aerial or cable TV outlet to ANT IN.

## 2.2 TV Connections


This digital TV receiver has a wide range of connectors available for use by a TV. The list below shows video connectors in the order of picture quality,

from the highest to the lowest.

- HDMI
- Component
- SCART
- Composite

Use an HDMI connector to connect the receiver to a TV for the best available picture quality. If the TV has no available HDMI connector, try the next best connection type.

## HDMI Connection

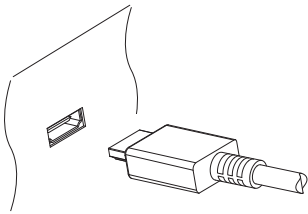


Connect the receiver's HDMI output connectors to the TV's HDMI input connector using an HDMI cable. An extra audio connection is not needed because HDMI also carries audio.

### Note

Some HDMI cables and TVs may not be compatible with the receiver due to differing HDMI specifications.




## Component Connection

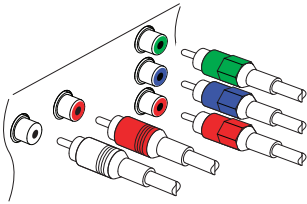

The receiver's component video connectors are labelled Y, Pb, and Pr, and their companion audio connectors are labelled L and R. Each of them is coloured differently. A typical component cable has five connectors. Connect the receiver's component video and audio output connectors to the TV's component video and audio input connectors using a component cable, so that the connectors of the same colour connect to each other.

## SCART Connection

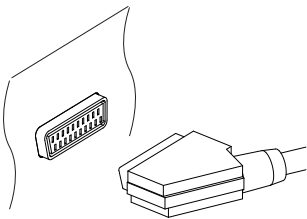


Connect the receiver's SCART output connector to the TV's SCART input connector using a SCART cable. An extra audio connection is not needed because SCART also carries audio.

### Note

SCART connectors cannot carry HD video.

## Composite Connection

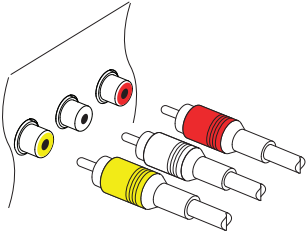


The composite video connector shares the audio connectors with the component video connectors. A typical composite cable has three connectors. The yellow connector is for the video connection. Connect the receiver's composite video and audio output connectors to the TV's composite video and audio input connectors using a composite cable, so that the connectors of the same colour connect to each other.

### Note

Composite video connectors cannot carry HD video.

## 2.3 AV Receiver Connection

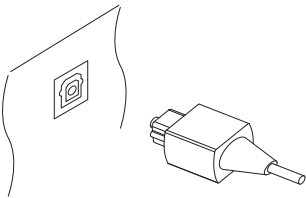


It is good to use an AV receiver for better audio quality. Connect the receiver's SPDIF connector to the AV receiver's digital audio input connector using an optical audio cable.


## 2.4 Network Connections

Connect the receiver to the wired or wireless network.

If a network cable is available, connect the receiver's LAN port to the router using a network cable.

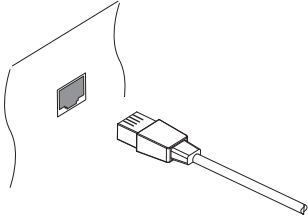

If no network cable is available, use the Wi-Fi dongle for wireless network connections. When the receiver is off, plug the Wi-Fi dongle into one of the USB ports on the rear of the receiver.

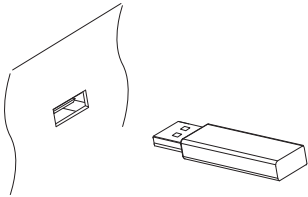

For details on how to configure the network settings, see [Network Settings](#) on page 54.


## 3 Scanning Channels

### 3.1 Understanding Satellite TV


A broadcast satellite's channels are called transponders. A transponder gathers signals over a range of uplink frequencies and retransmits them on a different set of downlink frequencies to receivers on Earth. Multiple TV channels are broadcast through a transponder. A transponder has three main components: frequency, symbol rate, and polarization.

To get the latest information about satellite TV transponders, visit <http://www.lyngsat.com>.


An LNB is the receiving device on a satellite dish. It downconverts a block of frequencies to a lower block of intermediate frequencies, ranging from 950 MHz to 2150 MHz, so that the signal can be carried to a satellite TV receiver. An LNB produces a particular frequency to do this. For example, an LNB producing 5150 MHz is supposed to receive a frequency band that ranges from 3000 to 4200 MHz, so that the absolute difference between the LNB frequency and any frequency within the band falls within the range of the intermediate frequencies.

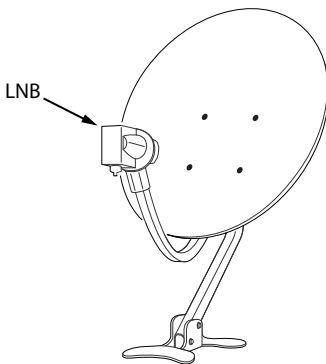

A DiSEqC is a switching device that selectively connects one of several satellite dishes to a satellite TV receiver. A 4-way switch is the most commonly used type of DiSEqC switch.

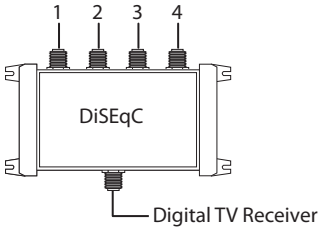

Single cable distribution, also called unicable, is a satellite TV technology that enables the delivery of broadcast signals to multiple receivers over a single coaxial cable.

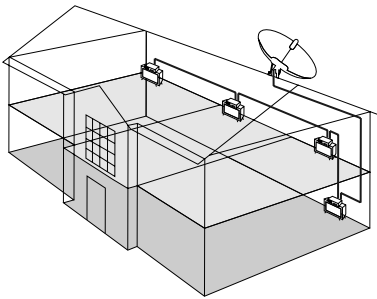

## 3.2 Satellite Dish Settings

### LNB Settings

A set of satellite dish settings must be properly configured for each desired satellite before performing a channel scan.

Open the **Settings > Installation > Dish Setting** menu.

There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up. To view an enlarged signal bar display, press the blue

button.

Configure the following settings properly using the signal bars.

- **Satellite:** Either choose a target satellite from the list of satellites or add a new one.
- **Tuner Connection:** Specify whether the receiver's satellite dish connectors are connected to two different dishes separately or to the one same dish via the loop-through cable. This option is available only when both connectors are connected by any means.
- **Tuner:** Determine which of the dish connectors to use. This option is not available when **Tuner Connection** is set to **Loop-Through**.
- **Frequency:** Choose a target transponder from the list of transponders.
- **LNB Power:** An LNB must be supplied with power to operate. Turn this on to supply the LNB with power if it doesn't have its own power supply.
- **LNB Type:** Specify what type of LNB is used.
- **LNB Frequency:** Specify what frequency the LNB generates. A dual-band LNB, also called universal LNB, generates two alternative frequencies to receive a wider band of satellite frequencies.
- **LNB 22 kHz:** Either turn this on or off to pick up a higher or lower frequency band.
- **DiSEqC Switch:** If one or more typical DiSEqC switches are used, this option must be set properly. Specify which of the DiSEqC ports is connected to the intended dish.

On this screen, users can add or change satellite and transponder data.

**Rename a satellite:** Choose **Satellite** and select a satellite. Press the red button and then enter a new name using the on-screen keyboard.

**Edit a satellite's longitude:** Choose **Satellite** and select a satellite. Press the green button and then **Modify** the longitude.

**Clear all transponders of a satellite:** Choose **Satellite** and select a satellite. Press the yellow button and then **confirm** to clear them.

**Add a transponder:** Place the focus on **Frequency** and press the green button. Specify the frequency, symbol rate, and polarization.

**Edit a transponder:** Choose **Frequency** and select a transponder. Press the yellow button and then modify the transponder's details.

**Delete a transponder:** Choose **Frequency** and select a transponder. Press the red button and then confirm to delete it.

## Unicable Settings


If the user's house is equipped with a single cable router, configure unicable settings properly.

Open the **Settings > Installation > Dish Setting** menu. Set **LNB Type** to **Unicable** and then choose **Unicable Setting**. Choose **Config Mode** and determine whether to scan for all available channels or a specific channel. Specify the details, such as port and predetermined intermediate frequency.

## 3.3 Using a Motorized Dish

While a fixed dish usually only picks up one satellite, a motorized dish can pick up multiple satellites.

There are two control methods for motorized dishes: DiSEqC 1.2 and USALS. With DiSEqC 1.2, the user must manually operate the dish to locate satellites one by one. The digital TV receiver stores each satellite position for later use. With USALS, the receiver can pinpoint all visible satellites through calculations using the dish coordinates and the built-in database of satellite positions.

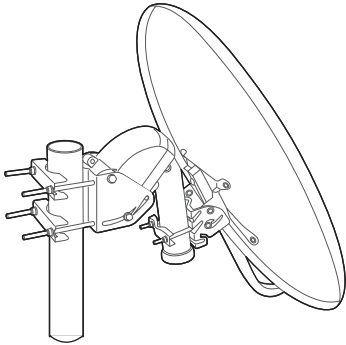

## Using DiSEqC 1.2

Open the **Settings > Installation > Dish Setting > Positioner Setting** menu, and then set **Positioner** to **DiSEqC 1.2**.

Repeat these steps for every desired satellite.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point at the highest point in its arc. The dish's movement accuracy may decrease over long-time use. To correct movement errors, choose **(Re-) Calculate** from **Positioner Command**.
2. Choose **Satellite** and choose a target satellite.
3. Choose **Tuner** and determine which of the dish connectors to use. This option is not available when **Tuner Connection** is set to **Loop-Through** under **Settings > Installation > Dish Setting**.
4. Choose **Frequency** and select any available transponder.
5. Choose **Go to Stored Position** from **Positioner Command** to rotate the dish, so that it faces the target satellite.
6. Place the focus on **Move** and press the left or right navigation button to finely drive the dish east or west for the best signal. The dish rotates continuously as long as either of these buttons is held down.
7. Choose **Store Satellite Position** from **Positioner Command** to save the dish's current position for the target satellite.



It may be useful to set limits to the movement scope of the dish for easier manipulation. Repeat these steps two times to set a limit position for the east and the west.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point.
2. Place the focus on **Move** and press the left or right navigation button to drive the dish.
3. Choose **Set East (soft) Limit** or **Set West (soft) Limit** from **Positioner Command** to save the dish's current position to use it as a limit position.

Choosing **Disable (soft) Limits** from **Positioner Command** clears these limit positions.

## Using USALS

Open the **Settings > Installation > Dish Setting > Positioner Setting** menu, and then set **Positioner** to **USALS**. Specify these items correctly:

- **Dish Longitude:** Enter the longitude where the dish is located.
- **Dish Latitude:** Enter the latitude where the dish is located.

Give the dish a test run to see if it works properly. Repeat these steps for every desired satellite.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point.
2. Choose **Satellite** and choose a target satellite.
3. Choose **Tuner** and determine which of the dish connectors to use. This option is not available when **Tuner Connection** is set to **Loop-Through** under **Settings > Installation > Dish Setting**.
4. Choose **Frequency** and select any available transponder.
5. Choose **Go to** to rotate the dish so that it faces the target satellite.

## 3.4 Scanning Satellite TV Channels

Open the **Settings > Installation > Satellite Search** menu.

Three methods are available for scanning for satellite TV channels.

- Scanning all available transponders for every channel
- Scanning for multiple channels that a specific transponder carries.
- Scanning for a specific one of multiple channels that a specific transponder carries.

Some option items, including **Satellite** and **Tuner**, are used in common in two or more scanning methods, as follows:

- **Satellite:** Choose a target satellite from the list of satellites.
- **Tuner:** Determine which of the dish connectors to use.
- **Search Type:** Determine which types of channels to scan for.
  - **All Service:** Scan for all available TV and radio channels.
  - **FTA Only:** Scan only for free TV and radio channels.
  - **TV Only:** Scan only for free and pay TV channels.
- **Network Search:** A transponder usually has information about other transponders provided by the same satellite TV service provider. It is better to turn on this option so that the receiver uses broadcast network information for faster and more precise scanning.

When any dish settings need to be reconfigured, select **Dish Setting** or **Positioner Setting** to jump to the relevant menu. To return to this menu, select **Service Search**.

Particular LNBs have a indicator light to show if the signal strength is good enough for the receiver to perform a channel scan. This may be useful when installing a new satellite dish. To activate this function, press the green button and then confirm to use it.

## Scanning for Every Channel

Three methods are available for scanning for every channel.

- **Set Search Mode to Auto.** With this method, the receiver uses its numerous database of transponders when scanning for channels. Choose **Time Calibration** and determine how long the receiver should wait to get time information from each transponder.
- **Set Search Mode to Blind.** Transponders occasionally change, so the receiver may happen to miss some channels when scanning for channels using the transponder database. With this method, the receiver scans all potential transponders using every possible combination of transponder elements not to miss any channel in a scan. However, it takes much longer time.
- **Set Search Mode to Fast Scan.** Particular satellite TV service providers manage dedicated transponders to provide up-to-date transponder information. With this method, the receiver uses that sort of transponder for faster and more precise scanning. Choose **Select Operator** and select a satellite TV service provider.

Make sure that the common options are properly configured before selecting **Service Search** to start channel scan.

## Scanning a Specific Transponder

Generally, one transponder carries multiple TV channels. To scan a specific transponder for the channels it carries, set **Search Mode** to **Manual**. Users need to get several details about a target transponder.

- **Frequency:** Choose a target transponder from the list of transponders.
- **Symbol rate:** Specify the transponder's symbol rate.
- **Polarity:** Specify the transponder's polarization.

- **Transmission:** Specify the modulation method used for the transponder. DVB-S2 is usually used for HD channels.

Make sure that the common options are properly configured before selecting **Service Search** to start channel scan.

## Scanning for One Channel

To scan for only one specific channel, set **Search Mode** to **Advanced**. Each satellite TV channel has unique packet IDs used to distinguish between channels. In addition to the information about a target transponder, users need to know what packet IDs a target channel uses.

- **Video PID:** Specify the channel's video packet ID.
- **Audio PID:** Specify the channel's audio packet ID.
- **PCR PID:** Specify the channel's PCR (programme clock reference) packet ID. This is usually identical to video PID. If the video PID setting doesn't work, try 8191.

Make sure that the common options are properly configured before selecting **Service Search** to start channel scan.

## 3.5 Scanning Terrestrial TV Channels

Open the **Settings > Installation > Terrestrial Search** menu.

There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up.

To scan for all available channels, set **Search Mode** to **Auto**. Choose **Search Type** and determine which types of channels to scan for.

- **All Service:** Scan for all available TV and radio channels.
- **FTA Only:** Scan only for free TV and radio channels.

- **TV Only:** Scan only for free and pay TV channels.

To scan for a specific channel, set it to **Manual**, and then choose **Channel** and specify the channel's number.

If the aerial needs power supply, turn on **Antenna 5V**.

Select **Service Search** to start channel scan.

## 3.6 Scanning Cable TV Channels

Open the **Settings > Installation > Cable Search** menu.

There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up.

To scan for all available channels, set **Search Mode** to **Auto**. Choose **Search Type** and determine which types of channels to scan for.

- **All Service:** Scan for all available TV and radio channels.
- **FTA Only:** Scan only for free TV and radio channels.
- **TV Only:** Scan only for free and pay TV channels.

To scan for a specific channel, set **Search Mode** to **Manual**. Set these options for the channel.





- **Frequency:** Specify the channel's frequency.
- **Symbol rate:** Specify the channels' symbol rate.
- **QAM Mode:** Specify the modulation method used for the channel.

Select **Service Search** to start channel scan.

## 4 Watching TV

Use the channel buttons or the numeric buttons to change channels. When changing channels, a dialogue box appears showing information about the current programme on the current channel, such as programme title and running time. Pressing the Info button also displays the programme information dialogue box.

The following symbols may appear on the dialogue box to indicate what the current channel and programme features.

- €: This is a pay channel. See Watching Pay Channels on page 29.
- : Teletext pages are available. See Viewing Teletext on page 29.
- : Subtitles are available. See Displaying Subtitles on page 28.
- : Dolby audio is available. See Audio and Video Settings on page 55.
- **HD**: This is an HD channel. See Audio and Video Settings on page 55.
- : Subchannels are available. See Watching Subchannels on page 30.

Use the left and right navigation buttons to view information about the previous and following programmes. To view more information about the current programme, press the Info button again.

Pressing the FAV button displays the list of channel groups, including favourites groups. Once a group is chosen, users can change only between the channels that belong to the group.

### 4.1 Channel List

Use the channel list to change channels more easily.

Pressing the up or down navigation button displays the group's simplified

channel list. These buttons can be configured to perform differently. See On-Screen Display Settings on page 56.

Press the **OK** button to open the channel list.

**Switch to a specific channel:** Place the focus on a channel entry using the navigation or numeric buttons, and then press the **OK** button.

**Skip through a channel list:** Use the up and down navigation buttons or, alternatively, the **Page up** and **Page down** buttons.

**Display specific channels:** Press the red button to sort or filter the channel list. A list of channel categories is displayed on the middle of the screen. Repeatedly pressing the red button displays different channel categories. Choose a channel category and then a subcategory.

**Add a channel to favourites groups:** Place the focus on a channel entry and press the green button. A list appears showing multiple favourites groups. Select one or more groups, and then press the **Exit** button to finish.

**View a favourites group's channels:** Press the **FAV** button and choose a favourites group.

**Search for channels:** Press the yellow button and enter search criteria using the on-screen keyboard.

## Channel List Preferences

Press the blue button and set these options properly.

- **Service preview:** With this enabled, selecting a channel entry displays the channel's picture in the inset window on the upper right of the screen. Select it once more to switch to the channel. With this option disabled, selecting a channel entry immediately switches to the channel.
- **Keep viewing service when exit:** With this disabled, pressing the **Exit** button switches to the channel that was focused on. With this option enabled, pressing the **Exit** button closes the channel list without changing channels.

- **View only filtered list:** With this enabled, choosing a channel category filters out channels that are not in the chosen category.
- **Logical channel number:** Some channels have their own channel numbers, and others don't. With this option enabled, the receiver uses the proper numbers. Channels that don't have proper numbers are numbered from 1000. With this option disabled, channels are numbered in the order in which they are found.
- **HD service grouping:** With this option enabled, HD channels are grouped at the top of the channel list.
- **Copy Service:** Channels are associated with the dish connector that was used when scanning for them. If the first dish connector is linked with the second one, it's usually best to associate all channels with both dish connectors. Use this function to duplicate the channels associated with the first dish connector so that the second one is also associated with them, or vice versa.

## 4.2 TV Programme Guide

The TV programme guide (EPG) provides schedule information for current and upcoming TV programmes.





Before using the programme guide, make sure that the clock is set correctly under **Settings > Configuration > Time Setting**.

Press the **EPG** button to open the programme guide. Use the navigation buttons to browse the channel timeline.

**Skip backward or forward by a day:** Press the red button or the green button.

**Change the timeline view:** Pressing the **EPG** button alternates the timeline view between channel-based view and time-based view.

**Change the time unit:** Press the **FAV** button and set **EPG Time scale** shorter or longer.

**View a programme's information:** Press the **Info** button on a programme entry.

**Schedule a programme to watch:** Select a programme entry and choose **Play**.

**Schedule a programme to record:** Select a programme entry and choose either **Once Record** or **Series Record**. For details, see [Scheduling TV Recordings Using the Programme Guide on page 34](#).

**Cancel a scheduled event:** Select a programme entry that is scheduled to watch or record.

**Search for programmes:** Press the yellow button. Choose **Search event name** and enter search criteria. It is also possible to search by programme genre. Choose **Content code** and choose a genre.

## Programme Guide Preferences

While most TV stations provide programme information for only a couple of days in each transponder, some TV stations, such as Canal+ and Sky, use a dedicated transponder to provide programme information for 7 or more days.


Press the blue button and determine which type of programme guide to use. It takes a rather longer time for the receiver to get programme information from the MediaHighway programme guide due to the large amount of information. Users can set the receiver to access the MediaHighway programme guide when the receiver turns on, to save time. Press the **FAV** button and set **Start MHW-Epg Automatically to Auto**.

## 4.3 Controlling Audio

When watching a channel, press the yellow button to control audio using these options.

- **Audio Track:** A TV programme may provide audio in two or more languages. Choose a different audio language if available.
- **Sound Mode:** Generally, an audio track has two sound channels. Determine which sound channel to use.
- **Sound Level:** The volume may vary depending on channel. Use this to make the volume even at every channel. With this set to **High**, for example, the volume is automatically adjusted to the level that is higher 30% than the current channel's.

## 4.4 Displaying Subtitles

When the subtitle symbol  is highlighted on the programme information dialogue box, it indicates that subtitles are available in one or more languages for the current programme. Press the **Subtitle** button and choose a subtitle language to display subtitles.

## 4.5 Watching Two Channels Simultaneously

Users can simultaneously watch two different channels with one channel shown in an inset window. It is also possible to watch a channel while playing a recording.


Press the PiP button, and a window appears at a corner of the screen, displaying another channel. Pressing the PiP button again displays the two pictures side by side at the same size. To close the window, press the PiP button once more.

**Change channels for the foreground picture:** Press the PiP List button and select a channel from the channel list that appears.

**Swap the background picture with the foreground picture:** Press the PiP Swap button.

**Change the location of the foreground picture:** Press the Page up or Page down button.

## 4.6 Viewing Teletext

The teletext symbol  highlighted on the programme information dialogue box indicates that teletext pages are available with the current channel. Press the Teletext button to display the teletext page.


Each teletext page has a page number. Enter a page number to view a different teletext page.

## 4.7 Watching Pay Channels

Pay channels are encrypted to prevent non-subscribers from watching them. Make sure to buy a correct pay-TV card, and additionally a CA module in many cases, to watch certain pay channels.

This receiver has four slots on the right front side. Open the flap by pulling the right edge. The upper two slots accommodate Conax pay-TV cards, and the lower two slots accommodate CA modules.


To watch Conax-scrambled pay channels, insert a Conax pay-TV card into one of the upper two slots. To watch pay channels scrambled with non-Conax, insert a pay-TV card into a CA module, and then insert the CA module into one of the lower two slots.

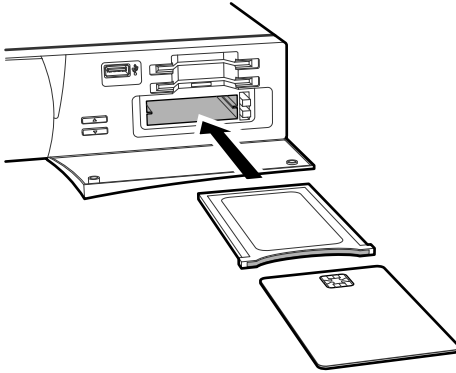

To view the information about the pay-TV card, open the **Settings > Utilities > CAS** menu. Select the slot in which the pay-TV card or CA module is installed.

## 4.8 Watching Subchannels

Particular channels, such as sports channels or film channels, may have subchannels (multi-feed). For example, a film channel may use subchannels to air a single film with regular minutes-long intervals at the same time.

The subchannel symbol  highlighted on the programme information dialogue box indicates that the current channel has multiple subchannels. Press the blue button, and a list appears showing available independent programmes. Select a programme to watch it.

## 4.9 Setting Up Timers

### Wake-Up Timer

This receiver can be set to turn on at a specific time and tune in to a specific channel.

Open the **Settings > Configuration > Time Setting** menu. Determine how frequently to run the wake-up timer by setting **Wake Up Mode** to anything other than **Off**. According to this setting, specify the date, days of the week, time, and channel.

### Sleep Timer

This receiver can be set to turn off at a specific time.

Open the **Settings > Configuration > Time Setting** menu. Determine how frequently to run the sleep timer by setting **Sleep Mode** to anything other than **Off**. According to this setting, specify the date, days of the week, and time.

## 4.10 Managing Channels

### Organizing the Channel List

Open the **Settings > System Tools > Service List Manager** menu.

**Sort channels:** Repeatedly pressing the red button sorts channels by a different category.

**Search for channels:** Press the yellow button and enter search criteria using the on-screen keyboard.

**Lock or unlock channels:** Press the blue button and select **Lock/Unlock Services**. Select one or more channels. Once a channel is selected, it appears

in the list of locked channels on the middle of the screen. Selecting a channel from the list of locked channels unlocks it.

**Rearrange channels:** Press the blue button and select **Move Services**. Select one or more channels. Place the focus on a channel entry to move the selected channels above it, and then press the green button.

**Delete channels from the channel list:** Press the blue button and select **Delete Services**. Select one or more channels. Press the green button and then confirm to delete them.

**Hide channels from the channel list:** Press the blue button and select **Skip Services**. Select one or more channels. Once a channel is selected, it appears in the list of hidden channels on the middle of the screen. Selecting a channel from the list of hidden channels makes it visible.

**Add a new channel:** Press the blue button, select **Edit Services**, and then press the green button. Specify the channel details, including frequency and channel name. Select **Yes** when finished.

**Modify a channel's attributes:** Press the blue button and select **Edit Services**. Select a channel and modify its attributes, such as channel name, for example.

## Organizing the Favourites List

Open the **Settings > System Tools > Service List Manager** menu.

**Add channel to a favourites group:** Press the blue button, select **Set Favorites**, and then choose a favourites group. Select one or more channels. Once a channel is selected, it appears in the favourites group on the middle of the screen. To select a different favourites group, press the green button and select a favourites group.

**Remove channels from a favourites group:** Press the blue button, select **Set Favorites**, and then choose a favourites group. Select one or more channels from the favourites group.

**Add a favourites group:** Press the blue button and select **Set Favorites**. Press the yellow button and enter a group name using the on-screen keyboard.

**Rename a favourites group:** Press the blue button and select **Set Favorites**. Place the focus on a favourites group and press the green button. Enter a new name using the on-screen keyboard.

**Rearrange favourites groups:** Press the blue button and select **Set Favorites**. Place the focus on a favourites group, press the **FAV** button, and then move it to a new location.

**Delete a favourites group:** Press the blue button and select **Set Favorites**. Place the focus on a favourites group, press the blue button, and then confirm to delete it.

## 4.11 HbbTV

HbbTV combines TV services delivered via broadcast with services delivered via broadband. HbbTV services include video on demand, interactive advertising, voting, games, social networking, programme-related services, and more.

When watching a channel, a rounding circle may appear in the upper-right corner of the screen to indicate that HbbTV services are available. Press the red button to access the channel's HbbTV services via the Internet.

### Note

The receiver must be connected to the Internet to use HbbTV services. HbbTV services may not be available, depending on the TV station.

## 5 Recording TV

This digital TV receiver can record TV programmes onto the built-in hard drive as well as a removable hard drive or flash drive. However, flash drives are not recommended for recording.


The receiver is set to use the built-in hard drive for recording by default. To use a removable hard drive, see Recording Preferences on page 36.

### Note

The receiver may not be equipped with a built-in hard drive, depending on the product options.

### 5.1 Recording TV Programmes

Under ideal conditions, users can watch 2 different channels at the same time while recording 3 other channels. When using time-shifting, at most 2 different channels can be recorded simultaneously. For details on time-shifting, see Time-Shifting on page 35.

Press the record button  to instantly begin recording the current programme.

#### Scheduling TV Recordings Using the Programme Guide

Use the programme guide to schedule TV recordings. Open the programme guide, and press the OK button on a programme entry scheduled to air later. Either choose **Once Record** to record the programme only once, or choose **Series Record** to record its every episode.



At the scheduled time, the receiver turns on if it is off, and begins recording the programme. Even if the receiver is set to turn off before the time that the recording is supposed to finish, the receiver does not turn off until recording is done.

## Manually Scheduling TV Recordings

Manual scheduling of programmes is sometimes needed because the programme guide is not always consistent with the actual broadcasting time. There may be changes in broadcast schedules or delays due to other programming.

Open the **Settings > System Tools > Schedule** menu.

**Add a recording event:** Press the green button. Specify the program details, including channel and start time. To display the programme at the scheduled time without recording, set **Type** to **Play**. With **Alarm Confirm Message** enabled, a message appears to notify that the event will start in 3 minutes. Select **Yes** when finished.

**View recording events by date:** Press the yellow button to open the calendar. Select a date to view its recording events.

**Edit a recording event:** Place the focus on an event entry, press the **OK** button.

**Delete a recording event:** Place the focus on an event entry, press the red button, and then confirm to delete it. To delete all events at once, press the blue button.

## 5.2 Time-Shifting

Time-shifting temporarily records the current programme. Using this feature, users can pause and resume a live programme and even scan through it backward or forward. For example, simply pause or skip backward in the

current live programme to replay missed crucial scenes when answering a phone call, when having gone to the bathroom, or when wondering what a character in a drama just mumbled.

Before using this feature, make sure that **TimeShift Start** is set to **Auto** or **Manual** under **Settings > Configuration > Recording Option**. For details, see **Recording Preferences** on page 36.

**Pause the live programme:** Press the pause button **⏸**. Press it again to resume.

**Skip backward or forward:** Press the play button **▶** to display the progress bar. Press the left or right navigation button. Repeatedly pressing the yellow button changes the skip interval from 10 seconds to 10 minutes.

**Jump to the beginning of the time-shift recording:** Press the previous button **⏮**.

**Return to the live programme:** Press the stop button **■**.

## 5.3 Playing Recordings

Press the **Play List** button to access the recordings stored on the built-in hard drive or removable storage devices. For details, see **Playing Recordings and Videos** on page 41.

### Note

TV recordings cannot be played by any receiver other than the receiver that made them.

## 5.4 Recording Preferences

Open the **Settings > Configuration > Recording Option** menu.

- **Alarm Confirm Message:** With this enabled, a message appears to notify users that a scheduled recording event will begin in 3 minutes.
- **Recording Stop Message:** With this disabled, pressing the stop button ■ stops the current recording immediately without asking for confirmation.
- **Extra Recording Time Before Start:** It is good to begin recording a few minutes earlier than the scheduled start time to avoid missing the beginning of a programme. Specify how much earlier the receiver should begin recording.
- **Extra Recording Time After Finish:** It is good to finish recording a few minutes later than the scheduled end time to avoid missing the end of a programme. Specify how much later the receiver should finish recording.
- **TimeShift Start:** With this set to **Auto**, the receiver begins time-shift recording whenever changing channels. With this set to **Manual**, pressing the pause button ■■ begins time-shift recording. With this set to **Off**, time-shifting is disabled.
- **TimeShift Duration:** Specify the maximum duration for time-shift recording. For example, if this is set to 30 minutes, only the last 30 minutes of the programme are temporarily preserved for playback.
- **Playback Position Jump:** When playing a recording, users can use the left and right navigation buttons to skip backward and forward. Specify the amount of time to skip at a time. With this set to **Auto**, it varies from 10 seconds to 4 minutes, depending on running time.
- **Playback Numeric Function:** When playing a recording, users can use the numeric buttons to skip to a specific point. With this set to **Percentage Move**, the unit for user-entered numbers is percentage. For example, to skip to the 35-percent point of the recording, enter "35". With this set to **Commercial skip**, users can enter 0 to 9, and the unit is minute. For example, to skip forward 5 minutes, enter "5". To skip backward 1 minute, enter "0".

- **TimeShift Device:** Determine which storage device to use for time-shift recording by default.
- **Record Device:** Determine which storage device to use for recording by default.


## 6 Playing Media Files

This digital TV receiver can play not only TV recordings but also many kinds of media files, including photos, music, and videos.

### 6.1 Managing Storage Devices

Connect a removable hard drive or flash drive to one of the USB ports on the front or rear of the receiver.

It is better to use the eSATA connector than USB ports when connecting a removable hard drive to the receiver, because eSATA transfers data five times faster than USB 2.0.

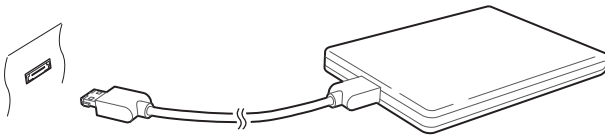

To manage the built-in hard drive and removable storage devices connected to the receiver, open **Settings > System Tools > Storage Manager** menu.

**View a storage device's state:** Choose **Current Device** and select a storage device.

**Format a storage device:** Storage devices must be formatted in FAT32 or NTFS for use with this receiver. Choose **Current Device** and select a storage device. Choose **Format**, choose **File System**, and then choose a file system. Select **Format** and then confirm to format it.

**Test the speed of a storage device:** Choose **Current Device**, select a storage device, and then press the green button.

**Open the file list of a storage device for playback:** Choose **Current Device**, select a storage device, and then select **Play List**.

**Remove a removable storage device from the receiver:** Choose **Current Device** and select a removable storage device. Press the red button and then confirm to remove it.

**Check a storage device:** Choose **Current Device**, select a storage device, and then choose **Storage Check**. If any faults are found, they are automatically repaired.

**Access a shared folder on a computer:** Choose **Current Device** and select **Network Drive**. Choose **Network settings**, choose **Folder**, and then specify the path to the folder. A good example of shared folder paths is "192.168.1.25/media".

**View the state of the user-available memory:** Choose **Current Device** and select **User**.

## 6.2 Managing Files

Press the **Play List** button to access the built-in hard drive or removable storage devices.

**Display only files of a specific type:** Press the left navigation button and choose a file type from the left pane that extends out. To display all files, regardless of file type, select **Play List**. **Imported Files** stands for videos except TV recordings.

**View files on another storage devices:** Press the **Play List** button and choose a different storage device.

**Sort files:** Press the yellow button and choose a category.

**Create a folder:** Press the blue button and select **New Folder**.

**Rename a file or folder:** Place the focus on a file or folder, press the blue button, and then select **Rename**. Enter a new name using the on-screen

keyboard.

**Move files or folders into another folder:** Select one or more files or folders using the red button, and press the blue button. Select **Move to Folder** and choose a subfolder or the upper folder.

**Copy files or folders onto another storage device:** Select one or more files or folders using the red button, and press the blue button. Select **Copy to Device** and choose a different storage device.

**Delete files or folders:** Select one or more files or folders using the red button, and press the blue button. Select **Delete** and confirm to delete them.

## 6.3 Playing Recordings and Videos

Select one or more recordings or videos using the red button, and then press the OK button to play them.

### Note

Some videos may not play properly, depending on how they are encoded.

Pressing the play button ► displays the progress bar. Use the progress bar to navigate through the video. To hide the progress bar, press the play button ► again.

**Pause and resume playback:** Press the pause button ■■, and press it again to resume.

**Skip backward or forward:** Press the left or right navigation button. To continuously skip, press and hold these buttons. Repeatedly pressing the yellow button changes the skip interval from 10 seconds to 10 minutes.

**Skip to a specific point:** Press the play button ► to display the progress bar, and then enter a number. This action can be configured to perform differently. See Recording Preferences on page 36.

**Play fast forward or backward:** Press the forward button ►► or the backward button ◀◀. Repeatedly pressing these buttons changes the playback speed.

**Skip to the previous or next recording or video:** Press the previous button ◀ or the next button ►.

**Add a bookmark to a recording:** When playing a recording, users can add bookmarks to the recording for easier navigation. Press the red button to place a vertical marking bar at the current point on the progress bar. Bookmarks are preserved with the recording for later use.

#### Note

Only TV recordings can be bookmarked.

**Jump to a bookmark:** Press the green button.

**Remove a bookmark:** Jump to a bookmark using the green button, and then press the red button to remove the bookmark.

**Change subtitle display:** When a video is playing, press the **Menu** button and change subtitle display options, such as letter size and colour. For details on how to add font files, see [Using Different Fonts](#) on page 53.

#### Note

SMI and SRT subtitle formats are only supported by the receiver.

## 6.4 Viewing Photos

Select one or more photos using the red button, and then press the **OK** button to view them.

**View the previous or next photo:** Press the left or right navigation button.



**Start slideshow:** Press the green button. To pause and resume the slideshow, use the pause button **⏸**.

**Set a photo as wallpaper for radio channels:** Press the red button when a photo is displayed. The photo is displayed while users listen to a radio channel.

## 6.5 Playing Music

Select one or more songs using the red button, and then press the **OK** button to play them.

**Skip to the previous or next song:** Press the previous button **⏮** or the next button **⏭**.

**Shuffle or repeat playback:** Press the red button. Repeatedly pressing the red button changes the play mode.

- **[R]**: Songs are randomly played.
- **[A]**: Songs are played only once.
- **[A]**: All songs are repeated.
- **[1]**: The current song is only repeated.

**Add songs to the current playlist:** Press the green button. Select more songs using the red or green button, and then press the yellow button.

**Remove a song from the current playlist:** Place the focus on a song entry and press the yellow button.

## 6.6 Playing Media files from Other Devices

This receiver can play media files from computers or other DLNA-enabled devices, such as TVs and tablets, connected to the receiver via a network. For example, when a computer and the receiver is connected to the same

network, the receiver accesses the computer to play the computer's media files, or vice versa.

## Accessing Other Devices

Press the **Menu** button to open the apps screen. Select **M Client**, and the file list screen appears with the list of detected devices. Select a device and then select a file to play it.

For details on how to play videos, see *Playing Recordings and Videos* on page 41, for music, see *Playing Music* on page 43, and for viewing photos, see *Viewing Photos* on page 42.

## Allowing Other Devices to Access the Receiver

Use one of the following methods:

- Press the **Menu** button to open the apps screen. Select **M Server** and then select **Start**.
- Open the **Settings > Installation > Network Setting** menu. Choose **Media Server** and then select **Start**.

When **Start Type** is set to **Auto**, other devices can access the receiver at any time when the receiver is on.

## 7 Apps

Press the **Menu** button to open the apps screen. Most apps requires an internet connection for proper operation.

### 7.1 Webzeal

Webzeal is a web browser. Use it to surf the Internet.


#### Note


Webzeal cannot play flash video, which is heavily used on the web.

Pressing the **Menu** button displays a toolbar, including a web address field and several icons, at the bottom of the screen.

#### Viewing a Webpage

Webzeal takes up the lower part of the screen so that users can watch live TV on the upper part.

**Adjust the vertical view size:** Press the red button or, alternatively, press the **Menu** button and select the vertical view icon . Repeatedly pressing the red button changes the view size from full screen to half and then to quarter.

**Adjust the horizontal view size:** Press the green button or, alternatively, press the **Menu** button and select the horizontal view icon .


**Zooming in a webpage:** Press the yellow button.


**Zooming out a webpage:** Press the blue button.



## Navigating Webpages

A pointer is available to help users navigate webpages. Use the navigation buttons to move the pointer. To see another webpage, move the pointer over a link and press the OK button.

**Enter a web address:** Press the Menu button, select the web address field, and then enter a web address using the on-screen keyboard.

**Refresh a webpage:** Press the Menu button and select the refresh icon .


**Halt a webpage from downloading:** Press the Menu button and select the stop icon .

**Move between the series of webpages that have already been viewed:** Press the Menu button and select the back icon  or the forward icon .

**View the web browsing history:** Press the Recall button to display the list of recently-visited webpage. Select a webpage to open it.

## Bookmarks

**Bookmark the current webpage:** Press the FAV button and press the red button.

**Open a bookmarked webpage:** Press the FAV button to display the list of bookmarked webpages. Alternatively, press the Menu button and select the bookmark icon . Select a bookmark to open it.


**Delete a bookmark:** Press the FAV button and place the focus on a bookmark. Press the yellow button and confirm to delete it.

**Edit a bookmark:** Press the FAV button and place the focus on a bookmark. Press the blue button and edit the web address using the on-screen keyboard.

**Set the current webpage as home page:** Press the FAV button and press the green button.

**Open the home page:** Press the **Menu** button and select the home page icon .

## Entering Text

**Switch to a different language keyboard:** Press the **Menu** button and select the keyboard icon . A list appears, showing available keyboard layouts. Choose a keyboard layout, and then choose a keyboard language. Restart Webzeal to put the chosen keyboard into use.

**Switch between the numeric keypad and the normal keyboard:** Press the **Menu** and press the green button.

**Enter text into a field:** When the pointer is over a text field, pressing the **OK** button displays available typing actions. Choose **Input Text** and enter text using the on-screen keyboard.


## 7.2 Free TV+

Free TV+ allows users to view videos from a variety of video-sharing web services, such as YouTube and Dailymotion. Users can either view videos online or download them for later enjoyment.

Choose a video-sharing web service to access it.

**View videos in a specific category:** Press the green button and choose a category.

**Search for videos:** Press the yellow button and enter search criteria using the on-screen keyboard.

**Download a video:** Place the focus on a video entry and press the record button .

**View the list of downloaded videos:** Press the red button. Alternatively, select **Download List** from the list of video-sharing web services.

## Playing Videos

Select a video from the list of videos to play it.

### Note

Some videos may not play properly, depending on how they are encoded.

**View in full screen:** Press the OK button. To exit full screen, press it again.

**Pause and resume playback:** Press the pause button **⏸**, and press the play button **▶** to resume.

**Skip backward or forward:** Press the backward button **⏮** or the forward button **⏭**

## Free TV+ Preferences

Press the blue button, and set these options properly.

- **Seek Time:** Specify the amount of time to skip at a time.
- **YouTube Picture Quality:** Determine what quality level to use to view YouTube videos.
- **YouTube Location:** To view only videos from a specific country, choose a country.
- **Parental Control:** Lock specific video-sharing web services to prevent children from watching them.

## 7.3 iTV+

Use iTV+ to watch internet TVs.

**Tune in to a TV station:** Select a TV station.

**View in full screen:** Press the green button. To exit full screen, press it again.

**Add a TV station:** Press the red button. Specify the TV station's details, including name and web address. Select **Add** when finished.

#### Note

The web address must include "http://" and indicate the media itself, not the webpage that contains it.

**Edit a TV station:** Place the focus on a TV station entry and press the blue button. Change the details, and select **OK** to finish.

**Delete a TV station:** Place the focus on a TV station entry and press the blue button. Select **Delete** and confirm to delete it.

**Search for TV stations:** Press the yellow button and enter search criteria using the on-screen keyboard.

**View information about a TV station:** Place the focus on a TV station entry and press the **Info** button.

## 7.4 iRadio+

Use iRadio+ to listen to internet radios.

**Tune in to a radio station:** Select a radio station.

**View radio stations in a specific category:** Press the red button and choose a category.

**Add a radio station:** Press the green button. Specify the TV radio's details, including name and web address. Select **Add** when finished.

#### Note

The web address must include "http://" and indicate the media itself, not the webpage that contains it.

**Edit a radio station:** Place the focus on a radio station entry and press the yellow button. Change the details, and select **OK** to finish.

**Delete a radio station:** Place the focus on a radio station entry, press the blue button, and then confirm to delete it.

## 7.5 Weather

Use Weather to get weather forecasts for thousands of places around the world.

**Add a city:** Press the yellow button to display a list showing countries. Select a country and then select one of its cities.

Alternatively, press the green button and enter search criteria using the on-screen keyboard. Select a city from search results.

**Delete cities:** Press the blue button and select **Delete history list**. Select one or more cities using the red button, press the **OK** button, and then confirm to delete them.

**Set a city as start point:** Place the focus on a city entry and press the **FAV** button.

## 7.6 TV Portal+

TV Portal+ is a web portal, run by this receiver's manufacturer, that brings together web content dedicated for consumer electronics from diverse websites.

There are multiple web categories, including news and multimedia.

Use the navigation buttons to navigate the web categories and the **OK** button to select an item. Press the **Recall** or **Exit** button to return to the previous screen.



## Note

Web categories and items in each category may change.

## 7.7 Sync Player

Many people use  $\mu$ Torrent, a peer-to-peer file sharing program, to share media files. Sync Player can communicate with  $\mu$ Torrent on a computer to play media files downloaded by  $\mu$ Torrent.

Before using Sync Player, make sure that  $\mu$ Torrent is installed on a computer on the same network as the receiver.

Start Sync Player, and a list appears showing computers on which  $\mu$ Torrent is running and computers that have been connected to Sync Player. Select a computer to connect it to Sync Player. If this is the first connection, enter the number displayed on the receiver's screen into  $\mu$ Torrent's dialogue box.

Selecting a media category displays a list of files of the same type that are currently managed by  $\mu$ Torrent. Select a media category, and then select a file to play it.

The **Torrent** category displays the torrents list. Selecting a torrent shows all the files contained in it. Select a file to play it.

## Note

It is not possible to play files that are not completely downloaded.

## 7.8 T Apps

Use T Apps to get various apps provided by this receiver's manufacturer.

**Download new apps:** Press the blue button, then press the **OK** button. A list appears showing new available apps. Select one or more apps using the

OK button, and press the red button to start downloading.

**Play an app:** Place the focus on an app and press the green button.

**Delete an app:** Place the focus on an app, press the yellow button, and then confirm to delete it.

## 8 Preference Settings

### 8.1 Language Settings

Open the **Settings > Configuration > Language Setting** menu.

- **Menu Language:** Determine what language to use for the interface.
- **Audio Language:** A TV programme may provide audio in two or more languages. Determine what audio language to use by default.
- **Audio Language2:** Determine what audio language to use as an alternative when the default language is not available.
- **Subtitle Language:** A TV programme may provide subtitles in one or more languages. Determine what subtitle language to use by default.
- **Subtitle Language2:** Determine what subtitle language to use as an alternative when the default language is not available.
- **Teletext Language:** A TV channel may provide teletext pages in one or more languages. Determine what teletext language to use by default.

### Using Different Fonts

Users can install truetype font files in the receiver to use them with subtitles and displays.

On the computer, open Windows Explorer to access the receiver. Enter the receiver's IP address into the Address Bar. Once it's connected, move to the "root/var/font" directory. If the "font" directory is not found, create it under the "var" directory. Copy font files into the "font" directory.

Open the **Settings > Configuration > Language Setting** menu. Choose **User Font File** and choose a font to use it for text display.

## 8.2 Network Settings

A wired or wireless network connection is required to perform internet tasks.

- Using media apps, such as **Weather** and **Free TV+**
- Accessing a computer to play media files stored on it
- Acquiring software updates

Open the **Settings > Installation > Network Setting** menu.

It is better to set the router for dynamic IP addresses so that the receiver can automatically connect to the network. Turn on **DHCP** if **DHCP** is enabled on the router.

If **DHCP** is not available, specify the network details, including IP address and gateway.

### Proxy Server Settings

If a proxy server is used for internet connections, the settings for the proxy server must be configured properly. Open the **Settings > Installation > Network Setting** menu, and choose **Proxy Server**. Specify the proxy server's details, including port number and user account.

### DDNS Settings

A **DDNS** account allows the receiver to create a web address that points to the user's local network, so anyone can access the receiver from anywhere in the world.

If a **DDNS** account is available, configure the **DDNS** settings properly. Open the **Settings > Installation > Network Setting** menu, and press the red button. Specify the **DDNS** account's details, including web address and user account.

## 8.3 Clock Settings

Open the **Settings > Configuration > Time Setting** menu.

- **Local Offset:** Specify the time zone where the receiver is located.
- **Daylight Saving:** To apply daylight saving time, specify the country where the receiver is located.
- **Clock Mode:** Determine which to use between 12-hour and 24-hour clock formats.

For **Wake Up Mode** and **Sleep Mode**, see **Setting Up Timers** on page 31.

## 8.4 Audio and Video Settings

Open the **Settings > Configuration > A/V Output Setting** menu.

- **TV Type:** Determine which TV standard to use.
- **TV Aspect Ratio:** Determine which aspect ratio to use by default.
- **Display Resolution:** Determine which resolution to use by default. Technically, 1080p is better than 1080i, but the difference is only slight to most people.
- **Display Format:** Determine how to display 4:3 pictures on the 16:9 screen, or vice versa.
  - **Pillar Box:** 4:3 pictures fit the height of the 16:9 screen with black bars on the sides.
  - **Full:** 4:3 pictures blow up to fit the width of the 16:9 screen with the top and bottom edges cut off.
  - **Letter Box:** 16:9 pictures fit the width of the 4:3 screen with black bars on the top and bottom.
  - **Pan Scan:** 16:9 pictures blow up to fit the height of the 4:3 screen with the sides cut off.

- **Video Output Mode:** Determine which colour space to use for the SCART output. RGB is much higher quality than CVBS.
- **HDMI Dolby Digital:** Determine whether or not to pass through Dolby audio via HDMI when available.
- **Dolby Digital Default:** Determine whether or not to use Dolby audio when available.
- **Sound Mode:** Generally, an audio track has two sound channels. Determine which sound channel to use by default.
- **Power Saving in Standby Mode:** With this enabled, the receiver's front display shows nothing when in standby mode. With this disabled, it displays the current time.
- **Audio Sync Delay:** If the sound and picture don't match up, adjust this until they match.

## 8.5 On-Screen Display Settings

Open the **Settings > Configuration > Display Setting** menu.

- **Info Box Position:** Specify how much to raise or lower the position of the programme information dialogue box.
- **Info Box Display Time:** Specify how long to display the programme information dialogue box when changing channels.
- **Volume Bar Display Time:** Specify how long to display the volume bar when adjusting the volume.
- **Zapping Mode:** Determine what to display when changing channels. With this set to **Black Screen**, the receiver displays nothing. With this set to **Freeze**, the receiver displays the last still picture of the previous channel.
- **Up/Down Key:** Determine for what to use the up and down navigation buttons when watching a channel. With this set to **Simple Service**

**List**, the simplified channel list is displayed. With this set to **HD Service Change**, a channel change is made between HD channels. With this set to **Service Change**, a channel change is made.

- **Front Display Scroll**: The receiver's front display shows the current programme's title or the current menu item. Determine how the display scrolls to show longer strings. With this set to **Continuous**, it repeatedly scrolls the string. With this set to **Off**, it never scrolls the string. With this set to **Once**, it scrolls the string only once.
- **Front LED Brightness**: Adjust the brightness of the front light properly.
- **Screen Change Effect**: Choose one of the screen change effects.

## 8.6 Parental Control

TV programmes are rated according to their level of violence, nudity, and restricted language. It is possible to set the receiver to block programmes rated a certain class or higher to prevent children from watching them. It is also possible to lock specific menu items so that children or others can't access them. Users must enter the passcode to watch a blocked programme or access a locked menu.

Open the **Settings > Configuration** menu, choose **Parental Control** menu, and then enter the passcode.

- **Censorship**: Specify a programme rating.
- **Change PIN code**: Change the passcode. The default is "0000".
- **System**: With this selected, the passcode is required when turning on the receiver.
- **Installation**: With this selected, the **Installation** menu is locked.
- **Configuration**: With this selected, the **Configuration** menu is locked.
- **Edit Services**: With this selected, the **Service List Manager** menu is locked under **System Tools**.

## 8.7 Maintaining the Digital TV Receiver

The internal flash memory is used for maintaining the preference settings and channel data.

Open the **Settings > Installation > System Recovery** menu.

Use these to reset the digital TV receiver.

- **System restore to factory default:** Reset all settings to factory defaults and clear all channels.
- **Reset configuration data:** Reset all settings to factory defaults.
- **Reset service data:** Clear all channels.

Use these to back up and restore the receiver.

- **System restore to stored position:** Restore the receiver using the stored settings and channels.
- **Store system data:** Back up all settings and channels.
- **Delete stored position:** Clear all stored settings and channels.

It is also possible to share the receiver's settings and channel data with other receivers of the same kind, using a flash drive. Connect a flash drive to one of the receiver's USB ports.

Open the **Settings > System Tools > Data Transfer** menu.

- **Transfer All System data to USB storage:** Export all settings and channel data to the flash drive.
- **Transfer Service data to USB storage:** Export all channel data to the flash drive.
- **Data download from USB storage:** Import settings and channel data from the flash drive.



## 8.8 Updating the Digital TV Receiver

Software updates for this digital TV receiver become available from time to time. Software updates may improve the receiver's performance or deal with any outstanding issues.

Open the **Settings > Installation > System Information** menu to check the current version of the receiver. Visit <http://www.tiviar.com> to download the latest update file. Make sure that the available version is newer than the currently installed version before downloading it.

Decompress the update file and copy it into the root directory of a flash drive. Connect the flash drive to one of the receiver's USB ports. A dialogue box appears showing available update files. Select an update file and press the red button. Never turn off the receiver until the update process is complete.

### Online Update

Online software updates may be available, depending on the country.

Open the **Settings > Installation > Network Setting** menu, and choose **Software Upgrade**. Choosing the server name displays a list of available updates. Select one or more items, and press the red button to download and install them.

# Appendix A

## Universal Remote Control

The remote control can expand its capabilities, allowing users to control the TV connected to the receiver.

A user can transform the remote control into a universal remote control by entering a 4-digit remote control code for the TV. Turn on the TV, and follow these steps:

1. Find the TV's brand name from the list of remote control codes.
2. Press the **TV** button and the **OK** button for 2 seconds simultaneously. The TV button blinks twice.
3. Enter one of the available codes. If the code is not correct, the TV button blinks once. Try the others until the TV turns off.
4. Press the **OK** button to finish. The TV button blinks twice.

If all of the codes appear not to work, follow these steps:

1. Press the **TV** button and the **OK** button for 2 seconds simultaneously. The TV button blinks twice.
2. Press the up or down navigation button repeatedly within 10 seconds at each attempt until the TV turns off.
3. Press the **OK** button to finish. The TV button blinks twice.

It is possible to identify what code is set for TV. Press the TV button and the OK button for 2 seconds simultaneously, and then press the Info button within 3 seconds. The TV button blinks as much as the number of each digit of the code. To indicate "0", it blinks 10 times.

**A**

A.R. Systems 8644, 7213, 6896, 5090, 7014  
 Accent 7647, 8644, 6896, 3637  
 Acer 3857  
 Action 4523, 5510, 3637, 4648  
 Adcom 4884  
 ADL 7855  
 Admiral 3193, 2438, 5553, 5605, 3488, 3637, 4648,  
 Adventura 5874  
 Adventuri 5874  
 Adyson 4469, 4523, 4648  
 AEA 8644, 6896  
 AEG 5952, 6305, 5319  
 Agashi 4469, 3488  
 AGB 8568  
 Aiko 7647, 8644, 6896, 4469, 4530, 6482, 5739, 3350, 3518, 3488, 3637  
 Aim 8644, 6764, 6896, 3036, 7910, 8435, 8484,  
 Aiwa 5448, 7733, 6736  
 Akai 3350, 7910, 4530, 3011, 8644, 5739, 6669, 3518, 6482, 7647, 3036, 4016, 2429, 8060, 5605, 8568, 6381, 2810, 6896, 4783, 8020, 8394, 4469, 3488, 5393, 2796, 6305, 3840,

7733, 4659, 3451, 5905, 4925, 4523, 3802, 3637, 5874, 4648  
 Akashi 7314, 7647  
 Akiba 4016, 5896, 7014, 8644, 6896  
 Akira 5553  
 Akito 8644, 6896  
 Akura 8644, 6896, 5355, 6764, 7647, 4016, 5896, 3488, 8060, 7066, 3637, 4648  
 Alaron 4469  
 Alba 8644, 3840, 6896, 8060, 7647, 5553, 7287, 4530, 5355, 7384, 4016, 4469, 5531, 5605, 6230, 6812, 7733, 5119, 4925, 3637, 4648  
 Alfa 4648  
 Alkos 6482  
 Allstar 8644, 6896, 4648  
 All-Tel 4677  
 American High 5510  
 Americana 5510  
 Amplivision 7287  
 Amstrad 7647, 8568, 3488, 4530, 4016, 8644, 6896, 5739, 6764, 8377, 3840, 3451, 7066, 3637  
 Anam 8644, 6896, 7647, 4526  
 Anam National 8644, 6896, 4526  
 Andersson 5319, 7660  
 Anglo 7647, 3488, 3637

Anitech 7647, 3488, 8644, 6896,  
5896, 4523, 3637, 4648

Ansonic 7287, 8644, 6896, 7647,  
5355, 5090, 5090, 2620,  
5531, 4917, 3637

AOC 4523, 4648

Apollo 4659

Arcam 4469

Arc en Ciel 7430

Ardem 2590, 8060, 8644, 5613, 6896

Aristona 6896, 8644, 4648

ART Tech 4648

Arthur Martin 5605

ASA 4819, 6092, 4265

Asberg 8644, 6896, 4648

Asora 7647, 3637

Astra 8644, 6896, 3637

Asuka 4016, 4469, 3488, 5896

ATD 2924

Atlantic 8644, 6896, 4469, 4648

Atori 7647, 3637

Atoro 3637

Auchan 5605

Audiosonic 7647, 8644, 5090, 8033,  
6896, 7430, 8060, 6381,  
7287, 3488, 4016, 2590,  
3637, 4648

Audioton 2590, 7287, 3488, 3637

Audiovox 4648

Audioworld 2924

Autovox 5531

AVP 7733

AWA 7507, 6812, 7647, 5090,  
6764, 8644, 6896, 4469,  
6305, 5620, 3488, 4698, 3637

Axxent 7647

Axxon 8060

## **B**

B&D 7855

Baird 7430, 6127, 6982, 5301,  
7910, 3453

Barco 5605

Basic Line 3637, 4648, 5090, 8644,  
5605, 5355, 6896, 7647,  
4016, 5896, 7014, 6559, 3840

Bauer 8484, 7647

Baur 7647, 6640, 5265, 3835,  
8644, 6896, 3518, 3350,  
6736, 3637, 5874, 4648

Beaumark 5393

BEC 4648

Becrese 4523, 3802, 5874, 4648

Beko 8060, 6482, 2590, 7287,  
8644, 5553, 3840, 6896,  
6305, 6381, 7361, 4648

Bell & Howell 4648

Belson 4156, 4706

Benchmark-Beaumark 4523, 5510, 3637,  
4648

Bennett 6896, 8644

BenQ 8016

Beon 8644, 6896, 5553, 4648

Berthen 5355

Best 7287

Bestar 8644, 6896, 7287, 5090, 4648

Bestar-Daewoo 5090

Bigston 3637

Black Diamond 5319, 8033, 3840, 6896,  
7837, 3036

Black Star 5531

Black Strip 6482, 3802, 5510

Black Way 5896, 4016

Blaupunkt 3518, 6640, 5265, 6538,  
7839, 5186, 7014, 4849, 6812

Blue Sky 8644, 8060, 3840, 6230,  
5355, 6381, 2499, 6896,  
4016, 5896, 7014, 7733,  
4156, 7361, 6685, 4648

Blue Star 5896

Bondstec 5531

Boots 7647

Bosch 7839

BPL 8644, 6896, 5896

Brandt 4884, 7430, 4422, 3270,  
6982, 3847

Brandt Electronique 4422, 3270

Brend Star 3637

Brinkmann 8644, 6896, 5355, 7350,  
5553, 2590

Brionvega 8644, 6896, 8377, 4648

Briorryega 4648

Britannia 4469

Brockwood 4523, 3802, 5874

Broksonic 4523, 3802, 5874

Brother 3488

Bruns 2590

BSR 5605, 3350

BTC 4016

Bush 5355, 4016, 5605, 7647,  
6812, 8644, 4530, 5896,  
7384, 2438, 5090, 7350,  
3488, 3350, 3840, 6230,  
7910, 5952, 5905, 2924,  
6896, 8060, 5832, 7733,  
5453, 3802, 4648

## C

Cample 4523, 3802, 5874

Candle 4523

Canton 4016

Capehart 4523, 3802, 4648

Capsonic 3488

Carad 2696, 8644, 6896, 5355, 3840

Carena 7014, 8644, 6896

Carrefour 6812, 4265, 8644, 6896, 4648

Carver 4849, 4648

Cascade 7647, 8644, 6896

Casio 8644, 6896, 5605, 4648

Cathay 8644, 6896

CCE 8644, 6896

Celestial 6498, 8033, 7837

Centrex 7046, 5397

Centrum 3840

Centurion 8644, 6896, 4648

Century 5531

CGE 4752, 6634, 5553, 5531,  
7287, 5605, 3637

CGM 3637

CIE 3637

Cihan 4648

Cimline 7647, 4016, 3637

Cinex 3451, 5952  
 Circuit City 4523, 3802, 5874  
 Citizen 4523, 5510, 4648  
 City 7647, 3637  
 Clarivox 5553, 8644, 6896, 4265  
 Clatronic 8644, 7287, 4530, 8060,  
 4016, 3488, 6896, 5531,  
 7647, 3451, 6305, 5319, 3637  
 Clayton 3840  
 CMS 4469  
 Cobolt 5397  
 Colortyme 5510, 4648  
 Combitech 7733  
 Computron 3637  
 Concorde 7647, 3637  
 Condor 8644, 6896, 7287, 4469,  
 7647, 5896, 5531, 5553,  
 2620, 5605, 3488, 3637, 4648  
 Conia 3491, 7837, 4706, 8033  
 Conic 4523, 3802, 4648  
 Conrac 7361  
 Conrad 8644, 6896  
 Contec 4469, 7647, 7507, 6812,  
 3488, 8644, 6896, 3802, 3637  
 Continental Edison 7430, 4422, 6230  
 Coronado 4523  
 Cosmel 7647, 8644, 6896, 3637  
 Craig 4648  
 Crosley 5531, 4752, 6634, 5605,  
 3802, 5874, 4648,  
 Crown 7647, 5716, 7287, 2590,  
 8644, 6896, 6230, 8060,  
 6305, 6381, 5553, 7910,  
 4638, 6559, 3840, 4523,  
 3637, 4648

Crystal 4648  
 CS Electronics 4469, 4016, 5531  
 CTC 5531  
 CTX 8016  
 Curtis Mathes 4523, 3802, 5510, 4648, 3193  
 Cybertron 4016, 3802  
 Cytronix 3191

## D

Daewoo 5295, 5090, 2499, 4874,  
 3876, 8644, 6896, 7647,  
 4469, 4016, 6286, 7733,  
 3118, 2016, 3620, 4677,  
 4523, 3637, 4648  
 Daichi 3637  
 Dainichi 4016, 4469  
 Daitsu 4201  
 Dansai 8644, 6896, 3488, 6482,  
 4469, 7647, 6812, 7910, 4523  
 Dansette 6764  
 Dantax 7287, 2590, 8060, 6305,  
 6381, 7733  
 Datsura 7910  
 Dawa 7647, 8644, 6896, 4648  
 Daytek 2924, 4979, 8435, 4698  
 Dayton 4979  
 Daytron 7647, 5090, 8644, 6896,  
 4523, 3637  
 DEC 4167, 7314, 5397  
 Decca 8568, 8644, 6896, 6286,  
 7733, 4648  
 de Graaf 7910, 5605, 4783, 2438  
 Deitron 8644, 6896, 5090, 4016  
 Denko 3488

Denver 8644, 6896, 6305, 4485,  
 8299, 3637  
 DER 6127  
 Desmet 8644, 6896, 7647, 3637, 4648  
 Diamant 8644, 6896  
 Diamond 3488, 2924, 7647, 4777,  
 4469, 4530, 7314, 8033, 3637  
 Digatron 8644, 6896  
 Digihome 7660  
 Digiline 8644, 6896, 4819, 5355  
 DigiLogic 8644, 6896  
 Digitek 8033  
 Digator 8644, 6896, 6641  
 Digivision 3350  
 DigiX 3118  
 DiK 8644, 6896  
 Dixi 7647, 8644, 6896, 5531,  
 3637, 4648  
 DL 5397, 7046, 8644, 8299, 4677  
 Domeos 5355  
 Domland 3158  
 Dream Vision 8561  
 DSE 6641, 5952, 8033  
 DTS 7647, 3637  
 Dual 6982, 7350, 8644, 6896,  
 7213, 3158, 5605, 6286,  
 8394, 7660, 3840, 4648, 3637  
 Dumont 4265, 4523, 3802, 5874  
 Dunai 5605  
 Durabrand 8644, 4917, 6896  
 Dux 8644, 6896  
 D-Vision 8644, 7066, 6896  
 DVX 5397

Dynamic 3637  
 Dynatech 4523, 3802, 5874  
 Dynatron 8644, 6896

## E

Easy Living 4596, 5905  
 Eaton 5510  
 Ecco 2335, 8435  
 ECR 3802  
 Edison-Minerva 6230  
 Elbe 3444, 8377, 7287, 5605,  
 8644, 6896, 4016, 3518,  
 2620, 2696, 8568, 3350  
 Elbe-Sharp 8568  
 Elbit 4648  
 Elcit 5531, 8568, 5605  
 Elecs 4648  
 Electrature 4523  
 Electro Tech 3637  
 Electrobrand 5874  
 Electrohome 4523, 3802, 5874  
 Electronika 4648  
 Elekta 7647, 8644, 6896, 3488,  
 5896, 3637  
 Elfunk 3573, 3840  
 ELG 8644, 6896  
 Elin 4469, 8644, 6896, 4819,  
 4783, 3350, 5605, 7647,  
 3637, 4648  
 Elite 4016, 8644, 6896, 4523,  
 3802, 5510, 4648,  
 Elta 7647, 3488, 4469, 3637  
 Emco 5531

Emerson 8060, 5393, 5531, 8644,  
6896, 4530, 4265, 5896,  
3350, 2499, 2590, 7287,  
5605, 5355, 4523, 3802, 5874

Emperor 5896

Enzer 3036

EON 3802, 5510

Erres 8644, 6896, 4648

Estèle 5605

Etron 4709, 8644, 6896, 7647,  
5605, 8033, 3637,

Eurofeel 3488

EuroLine 8644

Euroman 4469, 3488, 8644, 6896, 7287

Euromann 4648

Europa 8644, 6896

Europhon 8644, 8568, 5605, 6896,  
5531, 4469, 4648,

Evesham 4596

Excel 8644, 6896

Expert 5605

Exquisit 8644, 6896, 5531

## F

Fagor 8644, 6896

Fairtec 4156

Family Life 8644, 6896

Fast 3634

Fenner 5090, 7647, 3637

Ferguson 5301, 4884, 4422, 3270,  
6127, 7430, 3847, 8644,  
6896, 6482, 6982, 4638,  
5620, 3350, 4783, 5119,  
3840, 4648

Fidelis 3637

Fidelity 5605, 3835, 2438, 8644,  
6896, 4530, 6764, 6127,  
4469, 3488, 7733, 3350

Filsai 3637

Finlandia 7910, 6092, 4783, 3350,  
5605, 2438, 4422, 6982

Finlux 4819, 8644, 6896, 8060,  
6092, 5605, 8568, 6381,  
4265, 2620, 8394, 6753,  
8020, 5952, 4659, 5553,  
6305, 7361, 3637, 4648

Firstline 8644, 6896, 5090, 5355,  
8060, 5605, 7647, 4469,  
5531, 2499, 2620, 7910,  
3350, 3840, 4156, 7361,  
6685, 5319, 3637, 4648

Fisher 6812, 7910, 7287, 3350,  
5605, 3802

Flint 8644, 6896, 2696, 4016,  
7014, 3488, 4648,

Force 7660

Forgestone 6127

Formenti 5605, 8644, 6896, 2590,  
4469, 4648

Formenti-Phoenix 4469

Fortress 3193, 4523, 3802

Fraba 8644, 6896, 7287

Friac 7647, 8644, 6896, 7287,  
4874, 2696

Frontech 5531, 3488, 2438, 7647,  
5605, 3637

Fujimaro 4677

Fujitsu 5605, 7647, 7213, 8644,  
6896, 3350, 8360, 4523,  
3802, 5874

Fujitsu General 7647, 5605



Fujitsu Siemens 3191, 5905, 5319  
 Funai 5355, 3488, 6764, 4523,  
 3802, 5874  
 Furichi 7314  
 Futronic 3488, 4167, 7314  
 Future 8644, 6896

**G**

Galaxi 8644, 6896, 3350, 5605  
 Galaxis 7287, 5553, 8644, 6896  
 Galeria 7647, 3637  
 GBC 5605, 7647, 5090, 4016,  
 2438, 3637  
 GE 6982, 5393, 5896, 3847,  
 4422, 7430, 3270, 4884  
 Geant Casino 5605  
 GEC 5605, 3350, 8644, 8568, 6896  
 Geloso 5531, 7647, 2438, 5605,  
 5090, 3637  
 Gemsound 3637  
 General 7430, 4422, 3637  
 General Electric 6982, 4422  
 General Technic 3637, 7647  
 Genesis 7647, 8644, 6896  
 Genexxa 4016, 8644, 6896, 6764,  
 5605, 7647, 4648,  
 Gericom 4677, 3191, 7855, 3118  
 Gitem 4648  
 GM 3637  
 GMG 3637  
 Goldfunk 5355  
 Goldhand 4469, 3637

GoldStar 8644, 7647, 7287, 4709,  
 2796, 5393, 5531, 4469,  
 6896, 5605, 3350, 7430,  
 2438, 6305, 8060, 6381,  
 7014, 4523, 5510, 4648  
 Gooding 6230  
 Goodmans 5295, 5905, 3840, 8644,  
 4874, 6896, 8060, 5355,  
 2499, 5090, 6812, 3488,  
 8568, 7647, 6230, 4530,  
 6982, 6482, 8020, 3847,  
 3270, 4016, 7733, 3876,  
 5832, 3118, 6948, 8299,  
 4698, 3637, 4648,  
 Gorenje 7287  
 GPM 4016, 3637  
 Gradiente 4638, 4849, 8644, 6896  
 Gradin 3637, 4648  
 Graetz 8060, 3350, 4530, 5605,  
 8644, 6559, 6896, 5319  
 Granada 8644, 6896, 3001, 5620,  
 4659, 3270, 3847, 5605,  
 7910, 6812, 6559, 8568,  
 2438, 3952, 6982, 4783, 4648  
 Grandin 8644, 6896, 7647, 5605,  
 5090, 5896, 4016, 7014,  
 2696, 8060, 6381, 5355,  
 3840, 4677, 4156, 3118  
 Granprix 3451  
 Grenadier 3637  
 Gronic 5605  
 Grundig 5265, 4679, 6640, 3518,  
 8435, 6896, 8299, 7647,  
 4265, 6230, 8644, 5119,  
 6812, 7287, 4925, 7733,  
 6948, 5393, 4698, 6982  
 Grunkel 5319  
 GTT 3637

**H**

H&B	7361
Haaz	8435
Haier	2924, 3488
Halifax	3488, 4469
Hallmark	4523, 3802, 5874
Hammerstein	3488
Hampton	4469
Hanimex	4016, 7733
Hanseatic	8644, 6896, 4874, 7350, 5605, 3350, 5896, 3158, 5295, 7287, 3876, 7647, 7361, 2590, 3637, 4648, 2796, 8060
Hantarex	7647, 8644, 6896, 8568, 3637, 4648
Hantor	8644, 6896
Harley Davidson	4523, 3802, 5510, 5874
Harrad	4523, 3802, 5874
Harsper	4677
Harvard	4523, 3802, 5874
Harwa	2335, 3453, 7789
Harwood	7647, 6764, 8644, 6896, 6230
Hauppauge	8644, 6896
HCM	7647, 6764, 8644, 6896, 4016, 5553, 5896, 3488, 3637
Heathkit	5874, 4648
Hedzon	6896, 8644
Hema	7647
Hicon	2519
Hifivox	7430
Higashi	4469

Highline	3488, 8644, 6896
Hikona	4016
Hiline	3637
Hinari	7910, 8644, 6896, 7647, 4016, 6812, 5605, 7384, 5119, 6230, 3488, 7733, 3802, 3637, 4648,
Hisawa	5896, 4016, 7014, 2696, 7733, 8060
Hisense	6685, 7910
Hitachi	3952, 6069, 4889, 6812, 6896, 7430, 2438, 4783, 5620, 4659, 5605, 6982, 6619, 5295, 7040, 5393, 8568, 6972, 4874, 8644, 6286, 4819, 6753, 4737, 4648
Hitachi Fujian	5620, 3952
Hitsu	7647, 2696, 7014, 4016
HMV	6127
Höher	8060, 5952, 4677
Home Electronics	6305
Horizont	4648
Hornophon	8644, 6896, 4648
Hoshai	4016, 7014, 5896
Huanyu	5090, 4469
Hugoson	3094, 7855
Hygashi	4469
Hyper	7647, 4469, 5531, 3637, 4648
Hypersonic	3350
Hypson	8644, 6896, 8060, 6381, 3488, 5896, 7014, 7733, 3840, 5355, 2590, 3637, 4648
Hyundai	8644, 4677, 6896, 8435, 7314, 3036, 3620, 5952

**I**

Iberia 8644, 6896

ICE 3488, 8644, 4530, 7647, 6896, 4016, 4469, 3637, 4648

Ices 4016, 4469

Ict 8644, 6286, 6896

IIsonic 4698

Iiyama 7855, 3094

IMA 4523, 3802, 5874

Imperial 8644, 5605, 7287, 4752, 6634, 6896, 2620, 3350, 5553, 5531, 4648

Indiana 8644, 6896, 4648

Infinity 4648

InFocus 3251

Ingelen 6230, 2696, 8060, 5605, 3350

Ingersoll 7647, 3637

Inno Hit 7647, 8644, 6896, 4016, 3637, 4648, 5896, 5319, 8568, 5531

Innovation 7350, 8644, 6896

Innowert 4677, 3191

Inotech 2335, 8033

Interactive 8644, 6896, 3835, 7839, 5605, 3350, 7287, 7430, 2620

Interbuy 7647, 8644, 3488, 5531, 3835, 6896, 3637,

Interdiscount 4648

Interfunk 8644, 6896, 3835, 7839, 5605, 3350, 7287, 7430, 5531, 6538, 4648

Internal 8644, 6896, 4874, 5090, 2499

International 4469

Intervision 5896, 7014, 8644, 4530, 2796, 7350, 2590, 7287, 3488, 5531, 7647, 6896, 3158, 6230, 4016, 5605

Irradio 7647, 8644, 6896, 4016, 5531, 4530, 3637, 4648

IST 4648

Isukai 4016, 8644, 6896, 5896, 7014, 4648

ITL 3637

ITS 8644, 4530, 4016, 5896, 3488, 4469, 7647, 6896, 3637

ITT 5605, 8020, 3350, 4659, 4783, 6127, 6092, 6559, 7910, 2696

ITT Nokia 3350, 4783, 5605, 4659, 6305, 2696, 8394, 2438, 8020, 6092, 7910, 6559

ITV 3488, 8644, 6896, 5531, 5090

## J

JBL 4648

JCB 5874

JDV 7066

Jean 6812

JEC 6482

Jetpoint 5510, 4648

JMB 8644, 4874, 5295, 5090, 6896, 5119, 7733,

Jocel 5716

Jubilee 6896

Jumbotroic 4648

JVC 4638, 6812, 6127, 4530, 4016, 6305, 5553, 3193, 4526, 3802, 4648

**K**

Kaiser 4648  
Kaisui 4016, 5896, 8644, 6896,  
4469, 7014, 7647, 3637, 4648  
Kambrook 2796  
Kamp 4469  
Kapsch 5605, 3350  
Karcher 8644, 6896, 7287, 2696,  
5605, 5896, 3488, 5453,  
8060, 5952, 6305, 3637, 4648  
Kathrein 6896, 8644  
Kawa 4530  
Kawasho 4469  
KB Aristocrat 5605  
Kendo 2696, 8644, 6896, 5605,  
7350, 3835, 7287, 2796,  
2438, 2620, 5531, 8377,  
3451, 3840, 4917, 2590,  
3637, 4648  
Kendwood 4523  
Kennedy 5605, 3444  
Kennex 3840  
Kenwood 4819  
Kingsley 4469  
Kiota 4709, 3637  
Kiton 6896, 8644, 5355  
KLH 4523, 3802, 5874  
Kloss 5510  
Kneissel 8644, 7287, 2696, 2620,  
5090, 4874, 6896, 3444,  
8377, 7733  
Kobic 3637  
Kobra 2519

Kolster 8644, 6896, 5531, 4016, 4648  
Konichi 7647, 3637  
Konka 8644, 6896, 4530, 8060,  
5553, 4016, 8485, 8299,  
3491, 4706  
Kontakt 6230  
Korpel 8644, 6896, 4648  
Korting 7287  
Kosmos 8644, 6896  
Kotron 6764, 3488  
Koyoda 7647  
KTV 4523, 3802, 5874  
Kuasho 4523, 4648  
Kuba 5605  
Kuba Electronic 5605  
Kyoshu 6764, 5553, 3488  
Kyoto 5605, 4469

**L**

L&S Electronic 4677, 8060  
LaSAT 2590, 7287  
Lavis 3840, 8644, 5605  
Leader 7647, 3637  
Lecson 8644, 6896  
Legend 7647, 3637  
Lemair 2620  
Lenco 8644, 7647, 5605, 5090,  
6896, 8299, 3840, 3637, 4648  
Lenoir 3637, 7647  
Lesa 5531  
Levis Austria 8644, 6896  
Lexsor 3453  
Leyco 3488, 8644, 6896, 4648

LG 8644, 5393, 7287, 7647,  
 7430, 2924, 6381, 8265,  
 2796, 5447, 4709, 6896,  
 4156, 6944, 4312, 5531,  
 8060, 4469, 5605, 6305, 3350  
 Liesenkötter 7839, 8644, 6896, 4648,  
 8644, 7839, 5186, 6896  
 Life 3637  
 Lifetec 8644, 7647, 7350, 5090,  
 5355, 3835, 3840, 6286,  
 6896, 4016, 3488, 4596,  
 8060, 3637, 4648,  
 Linitron 4523, 3802  
 Lloyd 4523, 3802, 3637, 5874  
 Lloyd's 4709, 7647  
 Lodos 3840, 7660  
 Loewe 3835, 5613, 7337, 8644,  
 6896, 7287, 8377, 8568, 4648  
 Logik 7507, 2924, 2335, 7647,  
 6127, 3488, 4530, 4709,  
 3118, 7855, 3840  
 Logix 5355, 7350  
 Luker 7066  
 Luma 8644, 2438, 5605, 2620,  
 6896, 5090, 7647, 8377,  
 3637, 4648  
 Lumatron 2438, 8644, 6896, 8377,  
 5605, 3350, 3488, 5301  
 Lux May 4648, 8644, 7647, 6896  
 Luxor 5319, 2438, 8020, 6753,  
 6092, 4659, 3840, 8394,  
 3350, 7910, 4783, 5605  
 LXI 5393, 4648

## M

M Electronics 3637, 4648  
 Macys 4523, 3802  
 Madison 8644, 6896  
 Magnadyne 5531, 8568, 5605, 3637, 4648  
 Magnafon 4648, 8568, 4469, 5301  
 Magnasonic 4523, 3637, 4648  
 Magnavox 8644, 6896, 6812, 7046,  
 3802, 4648  
 Magnum 3451, 8060, 8644, 6896,  
 6381, 3730  
 Mandor 3488  
 Manesth 8644, 6896, 3488, 6482,  
 5605, 2438, 4648,  
 Manhattan 8644, 6896, 5355, 3840,  
 4201, 5605, 5453,  
 Marantz 8644, 6896, 6764, 4648  
 Marcys 3802  
 Mark 8644, 6896, 4469, 5090,  
 7647, 8060, 6381, 4648  
 Master's 4874, 8644  
 Masuda 4016, 4530, 7647, 3488,  
 8644, 6896  
 Matsui 8644, 6896, 6230, 7647,  
 5605, 8568, 6482, 7910,  
 7507, 7384, 6812, 4530,  
 5265, 3518, 3270, 8060,  
 5739, 5119, 2438, 7014,  
 7733, 3840, 3637, 4648  
 Matsushita 4526  
 Matsuyama 8299  
 Mava 4523  
 Max-Multi 4648  
 Max-Tip1 3637  
 Max-Tip4 4648  
 Maxam 3488, 3637  
 Maxdorf 2335

Maxell 3637  
 Maxim 7066, 5952  
 MCE 7647, 3637  
 Mediator 8644, 6896, 4648  
 Medion 8644, 8060, 7361, 7350,  
 2924, 7733, 3840, 4917,  
 5355, 6896, 3835, 6286,  
 5832, 4596, 3118, 3730  
 Megas 2696  
 Megatron 5393  
 MEI 3840, 8644, 6896  
 Meletronic 6092, 8644, 3835, 7430,  
 2620, 5605, 4422, 6896,  
 6982, 5531, 4819, 5090,  
 5295, 3350, 3518, 5265,  
 7647, 8020, 6753, 4469,  
 3876, 8060  
 Memorex 7647, 5393, 4526, 3637  
 Memphis 3637, 7647  
 Mercury 4709, 8644, 7647, 6896, 3637  
 Merritt 4783, 3350, 5605  
 Metz 2769, 6975, 5313, 2410,  
 8644, 6896, 8299, 5355,  
 5319, 5265, 6640, 3518,  
 3840, 7324  
 MGA 5393, 8644, 6896, 4016  
 Micromaxx 8644, 6896, 5355, 3840, 7361  
 Microstar 7361  
 MicroTEK 8033  
 Midland 4523  
 Mikomi 7660  
 Minato 8644, 6896  
 Minerva 6230, 6640, 5265, 4265,  
 3518, 8568, 5620,

Minoka 6764, 8644, 6896, 4648  
 Mirror 5832  
 Mistral Electronics 6127  
 Mitsubishi 5620, 3193, 3835, 8644,  
 5393, 6812, 6127, 6640,  
 6896, 7910, 3840, 3802,  
 3637, 4648  
 Mitsuri General 5605  
 Mivar 7287, 4469, 4318, 8568  
 Monaco 7647  
 Monitor 5510  
 Morgan's 8644, 6896  
 Motorola 3193, 4648  
 MTC 7287, 3835, 5605, 4469,  
 3350, 4523, 5510,  
 MTLogic 8060, 6948  
 Multibroadcast 6127  
 Multitec 8644, 6896, 2590, 5355,  
 3840, 5952  
 Multitech 7647, 2438, 2590, 8644,  
 7287, 6896, 4469, 5531,  
 3488, 4523, 3802, 3637,  
 5874, 4648  
 Murphy 4469, 5605  
 Musikland 8644, 4016, 5531, 6896  
 MyCom 4698, 5393  
 Myryad 6896, 8644

## **N**

NAD 5393, 3350, 5605, 3802  
 Naiko 8644, 7066, 6305, 6896  
 Nakimura 5090, 8644, 6896  
 Namsunc 3637  
 Naonis 2438, 5605  
 NAP 4648

Narita 7066  
 NAT 3001  
 National 3001, 4648  
 NEC 4849, 8299, 7976, 3726,  
 8644, 6896, 7507, 8561,  
 6812, 7014, 7647, 5090,  
 4874, 4638, 3876, 3637,  
 3802, 5510  
 Neckermann 8644, 3518, 7287, 6736,  
 5553, 5531, 2620, 2438,  
 6538, 6896, 5605, 7839,  
 3835, 3637, 5874, 4648  
 NEI 8644, 6896, 4530, 5605, 4648  
 Neovia 4677, 4698  
 Nesco 5531, 7733  
 Netsat 8644, 6896  
 Neufunk 8644, 7647, 6896, 2696,  
 4016, 5896, 8060, 8644,  
 7647, 6896, 6982, 3637, 4648  
 New World 4016  
 Nicamagic 4469  
 Nikkai 4016, 8644, 6896, 3488,  
 6482, 4469, 7647, 6812,  
 4523, 4648  
 Nikkei 8060  
 Nikko 5393  
 Nissan 5510  
 Noblex 3637  
 Nobliko 4265, 4469  
 Nogamatic 7430  
 Nokia 3350, 5605, 8020, 4783,  
 5090, 8394, 6305, 6092,  
 6753, 4659, 6559, 7910,  
 2696, 7430, 5510, 3637, 4648  
 Noname 4648

Nordmende 7430, 8060, 5397, 4422,  
 6896, 3270, 5605, 5905,  
 3847, 6982, 5265, 8644, 4648  
 Norfolk 5605  
 Normerel 8644, 6896  
 Novabeam 4648  
 Novak 8644, 6896  
 Novatronic 8644, 4819, 5090, 6896,  
 3637, 4648  
 Nurnberg 5605, 3350  
 NU-TEC 7014, 2924

## O

O General 3637  
 Oceanic 5605, 3350, 7910, 4659,  
 4783, 8020  
 Odeon 3488  
 Okano 7287, 8644, 6896, 3488,  
 7647, 3637  
 Olidata 4698  
 Olympic 3637  
 Omega 3488  
 Omni 7046, 5397, 2924  
 Onceas 3637  
 Onwa 4530, 2810, 4016, 5739  
 Opera 8644, 6896, 4648  
 Optimus 4526  
 Optonica 3193  
 Orava 4648  
 Orbit 8644, 6896, 4648  
 Orcom 4262  
 Orient 3637

Orion 8644, 5119, 7384, 6896,  
 6764, 8568, 7733, 3118,  
 8060, 7507, 7647, 3488,  
 3453, 3637, 5874, 4648,  
 4523, 3802  
 Orline 8644, 4016, 6896  
 Ormond 5355, 3840, 8644, 6896  
 Orsowe 8568  
 Osaki 4016, 3488, 8644, 6764,  
 5090, 7384, 6896,  
 Osio 8644, 6896  
 Oso 4016  
 Osume 6812, 4016, 8644, 6896  
 OTF 3637  
 Otto Versand 3802, 3637, 5874, 7350,  
 3518, 3350, 7430, 3001,  
 6736, 6812, 3193, 3835,  
 5531, 7647, 5896, 6982,  
 8644, 6896, 6640, 5265, 8568  
 OVP 4648  
**P**  
 Pace 7733  
 Pacific 8644, 6896, 6286, 8060,  
 3840, 5119  
 Pael 4469  
 Palladium 7287, 8644, 2620, 8060,  
 5553, 6896, 5531, 7839,  
 6286, 3518, 6736, 6538,  
 5605, 7350, 2438, 4648  
 Palsonic 3488, 6764, 8644, 2796,  
 4709, 5553, 5453, 3453,  
 4016, 2924, 6896, 2335  
 Panama 7647, 3488, 4469, 8644,  
 6896, 5531, 3637,

Panashiba 4709, 3637  
 Panasonic 4526, 5620, 3001, 3350,  
 5605, 4783, 7605, 4709,  
 2410, 8568, 8644, 6896,  
 8360, 5393, 4648,  
 Panavision 8644, 2620, 6896  
 Panavox 3637  
 Panorma 3637  
 Papouw 8644, 6896  
 Pathe Cinema 5605, 4469, 7287  
 Pathe Marconi 7430  
 Pausa 7647, 3637  
 PCE/PEC 4523, 3802, 5510  
 Penney 4523, 5510  
 Perdio 5605, 8644, 4469, 5896, 6896  
 Perfekt 8644, 6896, 4648  
 Performance 3802, 5874  
 Philco 6634, 4752, 5553, 5531,  
 5605, 7287, 8644, 6896,  
 3802, 3637, 4648, 7350  
 Philex 6127, 5605  
 Philips 6896, 8644, 3518, 6127,  
 6538, 8016, 3802, 5874,  
 6982, 5090, 3350, 7647, 4648  
 Phocus 3730, 6948, 8060  
 Phoenix 8644, 6896, 7287, 2590,  
 5605, 4469, 4648,  
 Phonola 8644, 6896, 6127, 4469, 4648  
 Pilot 6896, 8644, 5716, 8435, 5510  
 Pioneer 4174, 7507, 8644, 4849,  
 3350, 7430, 5605, 4422,  
 6896, 8209, 7287, 6982,  
 2590, 3835, 4648, 7287, 2590  
 Plantron 8644, 6896, 3488, 7647,  
 3637, 4648  
 Playsonic 8060, 8644, 6559, 6381



Policom 7430, 3350, 5605, 4265,  
 4752, 6634, 6640,  
 Polytron 5896  
 Poppy 7647, 3637  
 Portland 5090, 2499, 4523, 5874, 4648  
 Powerpoint 6230, 8644, 6896, 2924  
 Prandoni-Prince 5531, 8568, 3350, 2438  
 Premier 7647, 3488  
 President 7314  
 Prima 7647, 3488, 6764, 7789,  
 4523, 3802, 5510, 3637, 4648  
 Princess 2924, 3637  
 Prinston 3840  
 Prinz 3350  
 Proelco 4648  
 Profex 7647, 5605, 3350, 2438, 3637  
 Profi 7647  
 Profitronic 8644, 6896, 4648  
 Proline 8644, 6896, 4884, 5295,  
 2620, 4698  
 Proscan 5510  
 Prosonic 8644, 6896, 7287, 5090,  
 4530, 5355, 8060, 4469  
 Protec 3637, 4648  
 Protech 8644, 6896, 7647, 5531,  
 3488, 5553, 5355, 5896,  
 5605, 2590, 3840  
 Proton 5393, 4523, 3637  
 Provision 4874, 8644, 6896, 3840, 8060  
 Pulser 4523, 5510, 3637, 4648, 4156  
 Pye 8644, 6896, 5090, 6764, 4648  
 Pymi 7647, 3637

## Q

Qty1 4648  
 Quadral 4016  
 Quasar 5531, 4526, 4677, 7647,  
 6634, 5186, 4265, 4819  
 Quelle 8644, 6736, 7507, 7430,  
 5355, 6896, 5265, 6538,  
 3835, 6640, 3518, 3350,  
 3488, 3840, 6092, 7647,  
 6812, 5531, 4752, 7839,  
 4523, 3802, 3637, 5874, 4648  
 Questa 6812, 3802

## R

R Line 4648  
 Radialva 7430, 4016, 5605, 8644,  
 6896, 4422  
 Radio Shock 4523  
 Radiola 8644, 6896, 4648  
 Radiomarelli 8568, 5531, 8644, 6896  
 RadioShack 8644, 6896, 5393  
 Radiotone 7647, 8644, 6896, 7287,  
 3488, 3840, 3637, 4648,  
 5553, 6764, 3451, 5355  
 Rank 4265  
 Rank Arena 6812, 2810, 3036  
 RBM 4265  
 RCA 4884, 3193, 3847, 3270,  
 6982, 3036, 5510,  
 Realistic 5393  
 Recor 8644, 5553, 6896, 4648  
 Record 4648  
 Rectiligne 8644, 6896  
 Rediffusion 3350, 4783, 6812, 6092  
 Redstar 8644, 6896

Reflex 8644, 6896, 3840, 5355  
 Regente 3637  
 Relisys 4677, 2108, 4979, 3191  
 Reoc 8060, 5295, 2499  
 Revox 8644, 6896, 7287, 4648  
 Revox/Studer 4648  
 Rex 2438, 2620, 5531, 5605, 3488  
 RFT 7287, 3488, 8644, 6896, 2590  
 Rhapsody 4469  
 Rice Club 5510  
 Ricoh 8644, 6896  
 Rinex 2335, 5553  
 R-Line 8644, 6896, 5605  
 RMB 4523  
 Roadstar 3840, 7647, 5553, 8644,  
 3488, 5896, 4485, 5832,  
 6896, 8060, 5355, 4016, 3637  
 Rodex 8644, 6896  
 Rosita 3637  
 Royal 3637  
 Royal Lux 7287, 6764, 3270  
 Rukopir 6896, 8644  
 Runco 5510

## S

Saba 4884, 7430, 3847, 6982,  
 2104, 3270, 4783, 4526,  
 4422, 5605, 8568, 3350, 8060  
 Sagem 2696, 7014, 5896, 2820, 2517  
 Saisho 8568, 7647, 7507, 5605,  
 3488, 4648  
 Saivod 8644, 7066, 6896, 5319,  
 5355, 5716, 3840

Sakai 5605  
 Sakio 3637  
 Sakura 3637  
 Sakyno 7014  
 Salora 5605, 3350, 8568, 2438,  
 4783, 6559, 7910, 8020  
 Salsa 3270  
 Sambers 8568  
 Sampo 4523  
 Samsung 2517, 8299, 8644, 5393,  
 7910, 7350, 5605, 4884,  
 6896, 7736, 3193, 4495,  
 4523, 5510, 3637, 4648,  
 7647, 7287, 3488, 4469  
 Samsux 4523  
 Sandra 4469  
 Sanky 4523  
 Sansui 8644, 2429, 6896, 8435,  
 4530, 2810, 7014, 6641,  
 3036, 4523, 5510, 3637, 4648  
 Santon 7647  
 Sanyo 7910, 3573, 6812, 7507,  
 5605, 8644, 5620, 6896,  
 7287, 6559, 4469, 7647,  
 2590, 4849, 3802, 3637  
 Save 8644, 6896  
 Saville 7733  
 SBR 8644, 6896, 6127, 4648  
 Schaub Lorenz 4783, 8060, 3350, 6305,  
 2590, 5090, 4156,  
 Schneider 6286, 8644, 6896, 7350,  
 3840, 5605, 3451, 8060,  
 3158, 7213, 6982, 5531,  
 2499, 7733, 7066, 4265,  
 4530, 3350, 4016, 5355,  
 3637, 4648  
 Scotland 5605

Scott 4485, 5393, 4523, 3802, 5874  
 Sears 5393  
 Seaway 5295  
 Seelver 6896, 3840, 8644  
 SEG 8644, 6896, 3840, 4917,  
 8377, 4469, 5319, 4016,  
 5355, 6230, 7647, 5605,  
 2499, 3634, 8060, 3637,  
 3488, 5295, 6812, 5531,  
 4523, 3802  
 SEI 6736, 5605, 8568, 8644, 6896  
 Sei-Sinudyne 8568, 6736, 8644, 6896,  
 5874, 4648  
 Seitech 7855  
 Seleco 2438, 8377, 5605, 2620,  
 3444, 3488, 6092, 6812, 4530  
 Semua 4523  
 Sencora 7647, 3637  
 Sentra 6482, 4016, 7647  
 Serino 2696, 7014, 4469, 3193  
 Sharp 3193, 7138, 6812, 4638,  
 6127, 8568, 6538, 4174,  
 7409, 5319, 4523, 3802  
 Shintom 5874  
 Shintoshi 8644, 6896  
 Shivaki 8644, 6896, 5119, 5090, 5393  
 Show 5553, 7647, 3637  
 Siarem 5605, 8568  
 Siemens 3518, 6640, 6538, 5265,  
 7839, 5186, 8644, 6896, 3350  
 Siemes 4523, 4648  
 Siera 8644, 6896, 8299  
 Sierra 4648  
 Siesta 7287

Sigmax 5510  
 Signature 5874  
 Silma 4648  
 Silva 8644, 6896, 4469, 3350,  
 3451, 3637  
 Silva Schneider 5952  
 Silver 6812, 8644, 7014, 3350,  
 6896, 6381, 5605, 3802  
 SilverCrest 3840, 8644, 6896  
 Singer 7647, 3011, 8644, 6896,  
 5531, 3444, 3270, 5605,  
 3637, 4648  
 Sinotec 2335  
 Sinudyne 5605, 3350, 8568, 6736,  
 8644, 6896, 7733,  
 Sky 8644, 5896, 3118, 5393,  
 6896, 4262  
 Skymaster 4819  
 Skysonic 3036  
 Sliding 4677, 3118  
 SLX 5355  
 Smaragd 6230  
 Snyder 4648  
 Soemtron 4677, 3191  
 Solavox 3350, 5605, 4783, 8644, 6896  
 Sonawa 4016  
 Soniko 8644, 6896  
 Soniq 2519  
 Sonitron 7910, 7287, 6559  
 Sonneclair 8644, 6896  
 Sonoko 8644, 6896, 7647, 3488,  
 3637, 5896, 4648,  
 Sonolor 7910, 5605, 6736, 4783,  
 3350, 5896  
 Sontec 8644, 6896, 7287, 7647, 4648

Sony 6736, 2762, 7507, 6219,  
 3193, 4849, 4752, 5874,  
 3078, 6812, 8644, 6896, 3802  
 Sound & Vision 4016, 5090, 8644, 6896  
 Soundesign 4523, 3802, 5510, 5874, 5393  
 Soundmaster 3637  
 Soundwave 8644, 6896, 5553, 6381  
 Soyea 2335  
 Specrician 4523, 4648  
 Spectra 7647  
 Ssangyong 7647  
 Staksonic 7647  
 Standard 8644, 6896, 3840, 4016,  
 7647, 5090, 3637,  
 Starlite 7647, 5605, 8644, 6896,  
 3488, 6764, 3637,  
 Starlux 3637  
 Stenway 5896, 4016  
 Stern 5605, 2438, 3488, 2620, 3444  
 Stevision 7066, 5952  
 Strato 8644, 6896, 3488, 7647  
 Strong 5319, 7660, 3840, 8644, 6896  
 Sunic Line 8644, 6896  
 Sunkai 7384, 7014, 4016, 2696,  
 8644, 6896, 6230, 4677  
 Sunstar 4530, 8644, 6896, 7647,  
 3488, 3637  
 Sunwatt 7014  
 Sunwood 8644, 6896, 7647, 3637, 4648  
 Superla 8568, 4469  
 Supersonic 7910, 6896, 2924, 3488,  
 8484, 7014  
 Supertec 3637, 4648

Supertech 7647, 8644, 6896, 4469,  
 4016, 3637  
 Supra 5393, 5090, 7647, 3637  
 Supremacy 4523, 3802  
 Supreme 5874  
 Susumu 3270, 4016, 4422  
 Sutron 7647, 3637  
 Svasa 8484  
 Swissline 5531  
 Swisstec 4262, 3118  
 SYC Line 3637  
 Sydney 4469  
 Sylvania 4648  
 Symphonic 4523, 3802, 5874  
 Sysline 8644, 6896  
 Sytong 4469

## T

T+A 6975  
 Tandberg 2410, 2620, 7430, 8377,  
 3350, 5605  
 Tandy 4016, 5531, 3193, 5605  
 Tashiko 6812, 4849, 4469, 5605,  
 2438, 3802  
 Tatung 5952, 8644, 6896, 8568,  
 7507, 7733, 8016, 5905,  
 4156, 4648  
 TCM 8060, 3730, 7361  
 Teac 2924, 3835, 8644, 4917,  
 5393, 7647, 6764, 5896,  
 3840, 6896, 5716, 5355,  
 5553, 4849, 8060, 7660,  
 7014, 8435, 3488, 2499, 5991  
 Teak 3637  
 TEC 7647, 5531, 3270, 8644,  
 6896, 3350, 5605, 3637, 3637

Techica 4016  
 Tech Line 8644, 6896, 5355, 4917, 5319  
 Techlux 4485  
 Technica 7066  
 Technics 4526, 4648  
 Techniland 4648  
 TechniSat 8644, 6896, 5605, 4201  
 Technisson 8060, 3730  
 Technosonic 8644, 6896  
 Techwood 5319, 5510, 5874  
 Tecnimagen 6896  
 Tecnison 3637  
 Tedalex 5553, 6305, 3011, 7647,  
 8435, 7910, 2924, 8299,  
 5397, 8644, 6896, 3637  
 Tehnol 3637  
 Teiron 7647  
 Teknant 3637, 4648  
 Teknika 4523, 5510  
 Tekon 5510, 3637  
 Teleavia 7430, 4422, 6982  
 Telecor 8644, 6896, 5605, 4016, 3158  
 Telefac 3637  
 Telefunken 4884, 3847, 4752, 8299,  
 4262, 4422, 6634, 3270,  
 7430, 2924, 6982, 5716,  
 5301, 8644, 6896, 2590,  
 2104, 8033, 2707, 3491,  
 8060, 5952, 6092, 7837  
 Telefusion 8644, 6896  
 Telegazi 8644, 5605, 4016, 3488, 6896  
 Telemeister 8644, 6896  
 Teleopta 3637

Telesonic 8644, 6896  
 Telestarc 7647, 8644, 6896, 6764, 3637  
 Teletech 8644, 6896, 5355, 7647,  
 5531, 3840, 3637,  
 Teleton 5605, 6812, 2438  
 Televideon 5605, 4469  
 Televiev 8644, 6896  
 Tempest 7647, 8644, 6896, 3488, 3637  
 Tennessee 8644, 6896  
 Tensai 4016, 8644, 6896, 7647,  
 4819, 5090, 4530, 2796,  
 5531, 6381, 5605, 3840,  
 3637, 4648  
 Tenson 3637, 7647  
 Tesla 8644, 4648  
 Tesla Orava 4648  
 Tevion 7350, 4706, 5905, 3191,  
 3451, 5355, 6286, 8060,  
 8644, 5952, 6896, 7361,  
 3840, 4596, 3730,  
 Texet 5090, 7647, 4469, 4016  
 Thomas 4523, 5510, 3637, 5874, 4648  
 Thomson 4884, 3847, 6982, 4422,  
 7430, 3270, 8644, 6896, 4469  
 Thorn 5620, 6127, 7430, 5301,  
 8644, 6896, 7507, 3270,  
 3952, 6982, 3350, 6736,  
 3835, 6812, 5090, 6482,  
 4752, 6634, 4874, 6640,  
 4265, 3802  
 Thorn-Ferguson 5620, 7430, 6127, 3350,  
 3270, 4874, 5301, 6482  
 Tiny 3453, 7789, 5393, 5510  
 Tobishi 4016  
 Tobo 3637  
 Tokai 8644, 6896, 5355, 5605,  
 5090, 7647, 3840, 4648

Tokaido 3840  
 Tokyo 4469, 6482, 5510  
 Tomashi 5896, 4016  
 Tongtel 7046, 8299  
 Topline 3840, 5355  
 Toshiba 4679, 4081, 6482, 3730,  
 7733, 7647, 2924, 8644,  
 6812, 4265, 8060, 7430,  
 3251, 5319, 4925, 5952,  
 4940, 5265, 3518, 2517,  
 5447, 4526, 8561, 3802, 5510  
 Tosonic 4523, 5510  
 Totevision 4523  
 Toyoda 7647, 4530, 3488  
 Trakton 7647, 3488  
 TRANS-continentals 5355, 3840, 8644, 6896,  
 2590, 4677  
 Transonic 8644, 6896, 7014, 8299,  
 3835, 3488, 2924, 5716,  
 5553, 7647  
 Transtec 4469  
 TRC 3637  
 Trevi 3637  
 Triad 8644, 6896, 4016, 4648  
 Trident 8568  
 Trilux 4648  
 Tristar 3488, 4016, 6127  
 Triumph 8568, 6092, 6896, 8644  
 Trivision 3637  
 Tsoschi 5896  
 TVTEXT95 6896

## U

Uher 8644, 6896, 5090, 5553,  
 2590, 7287, 8020, 4648  
 Ultravox 5090, 5531, 4469, 5605,  
 8644, 6896  
 UMA 4648  
 Unic Line 8644, 6896, 4659, 7014  
 Unimor 4648  
 United 8060, 8644, 6381, 6896,  
 7733, 3840, 8299, 7066  
 Universal 8644, 6896  
 Universum 6092, 4819, 5265, 4659,  
 2620, 4752, 7839, 5186,  
 6640, 3350, 5531, 6753,  
 6736, 5355, 7430, 8377,  
 8020, 7287, 6538, 5553,  
 8394, 7647, 6634, 3634,  
 7507, 8644, 3835, 6812,  
 3840, 4917, 4849, 5319,  
 4265, 5605, 3488, 6896,  
 7660, 2517, 3637, 4648  
 Univox 8644, 6896, 5605  
 Uranya 3637  
 Utax 5605

## V

V7 Videoseven 5991, 5393, 3118, 4698,  
 7855  
 Vanguard 3637  
 Veco 3637  
 Vestel 8644, 5605, 6896, 5355,  
 3840, 5319, 4648,  
 Vexa 7647, 8644, 6896, 3637, 4648  
 Victor 4638  
 Video System 4648  
 Videologic 4016, 4469  
 Videologique 4469, 4016  
 Videosat 5531

VideoSystem 8644, 6896  
 Videotechnic 4469, 5090  
 Videoton 5605  
 Vidion 3637  
 Vidtech 6812, 5393  
 ViewSonic 5991  
 Visiola 4469  
 Vision 8644, 3488, 6896, 3637, 4648  
 Vistar 3350  
 Vocson 4648  
 Vortec 8644, 6896, 4648  
 Voxson 8644, 6896, 2438, 5553,  
 5605, 5393

## W

Waltham 5553, 4422, 8644, 6896,  
 5355, 7430, 3840, 5605, 5119  
 Wards 4648  
 Watson 3840, 4596, 8644, 6896,  
 5605, 7647, 5355, 4016,  
 4698, 7839, 3637, 4648,  
 7350, 3158, 7733, 4917  
 Watt Radio 5605, 4469  
 Wega 8644, 6896, 6812, 3802  
 Wegavox 7647, 8644, 6896, 3637, 4648  
 Welltech 8060  
 Weltblick 8644, 6896, 4648  
 Weston 8644, 6896  
 Wharfedale 8644, 6641, 7350, 2707,  
 6896, 5952  
 White Westinghouse 4648, 4469, 8644,  
 6896, 2499  
 Windsor 5355, 3840

Windstar 5896  
 Windy Sam 6896  
 Winston 3637, 4648  
 Wintel 8060  
 Winternitz 3637  
 Word-of-Vision 3118, 3094, 4677, 3730,  
 3191, 2108, 7855,  
 Worldview 7014, 3637, 4648

## X

Xenius 5295  
 XLogic 2924, 7314  
 Xoro 3453, 7855  
 Xrypton 8644, 6896  
 X-View 4156

## Y

Yamaha 4526, 8374  
 Yamishi 5896, 7014, 4016, 8644, 6896  
 Yokan 8644, 6896  
 Yoko 8644, 6896, 4016, 3488,  
 7647, 7287, 6559, 4469,  
 5531, 3637, 4648  
 York 4648  
 Yorx 4016

## Z

Zanussi 2438  
 Zenith 2499, 5874, 4648  
 Zenor 6559  
 ZX 7733

# Appendix B

## Legal Notices



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



## Correct disposal of this product



This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

# Index

(Re-) Calculate, 18  
µTorrent, 51

## A

A/V Output Setting, 55  
Advanced, 22  
Alarm Confirm Message, 35, 37  
All Service, 20, 22, 23  
ANT IN, 9  
Antenna 5V, 23  
Audio Language, 53  
Audio Language2, 53  
Audio PID, 22  
Audio Sync Delay, 56  
Audio Track, 28  
Auto, 21–23, 37

## B

Back-Up, 6  
Black Screen, 56  
Blind, 21

## C

Cable Search, 23  
CAS, 30  
Censorship, 57  
CH Edit, 6

Change PIN code, 57  
Channel, 23  
Clock Mode, 55  
Commercial skip, 37  
Config Mode, 17  
Configuration, 57  
Content code, 27  
Continuous, 57  
Copy Service, 26  
Copy to Device, 41  
Current Device, 39

## D

Data download from USB storage, 58  
Data Transfer, 6, 58  
Daylight Saving, 55  
Delete, 41  
Delete history list, 50  
Delete Services, 32  
Delete stored position, 58  
DHCP, 54  
Disable (soft) Limits, 19  
DiSEqC 1.2, 18  
DiSEqC Switch, 16  
Dish Latitude, 19  
Dish Longitude, 19

Dish Setting, 15, 17–20  
Display Format, 55  
Display Resolution, 55  
Display Setting, 56  
Dolby Digital Default, 56  
Download, 6  
Download List, 47  
DVB-S2, 22

## E

Edit Services, 32, 57  
EPG, 4, 6, 26, 27  
EPG Time scale, 27  
Exit, 4  
Extra Recording Time After Finish, 37  
Extra Recording Time Before Start, 37

## F

Fast Scan, 21  
FAV, 4, 25, 46  
File System, 39  
Folder, 40  
Format, 39  
Free TV+, 47, 54  
Freeze, 56  
Frequency, 16–19, 21, 23  
Front Display Scroll, 57  
Front LED Brightness, 57  
FTA Only, 20, 22, 23  
Full, 55

## G

Go to, 19  
Go to Reference, 18, 19  
Go to Stored Position, 18

## H

HbbTV, 33  
HD Service Change, 57  
HD service grouping, 26  
HDMI Dolby Digital, 56  
High, 28

## I

Imported Files, 40  
Info, 4, 24, 27  
Info Box Display Time, 56  
Info Box Position, 56  
Input Text, 47  
Installation, 57  
iRadio+, 49  
iTV+, 48

## K

Keep viewing service when exit, 25

## L

L, 11  
LAN, 13  
Language Setting, 53  
Letter Box, 55  
LNB, 14  
LNB 22 kHz, 16  
LNB Frequency, 16  
LNB IN, 9  
LNB OUT, 9  
LNB Power, 16  
LNB Type, 16, 17  
Local Offset, 55  
Lock/Unlock Services, 31  
Logical channel number, 26  
Loop-Through, 16, 18, 19

## **M**

M Client, 6, 44  
M Server, 6, 44  
Manual, 21, 23, 37  
Media Server, 44  
Menu, 4, 6  
Menu Language, 53  
Move, 18, 19  
Move Services, 32  
Move to Folder, 41  
Movie, 6  
multi-feed, 30  
Music, 6

## **N**

Network, 7  
Network Drive, 40  
Network Search, 20  
Network Setting, 7, 44, 54, 59  
Network settings, 40  
New Folder, 40

## **O**

Off, 37, 57  
OK, 4, 7, 35, 41–43, 47  
Once, 57  
Once Record, 27, 34

## **P**

Page down, 25, 29  
Page up, 25, 29  
Pan Scan, 55  
Parental Control, 48, 57  
Pb, 11  
PCR PID, 22  
Percentage Move, 37  
Photos, 7

Pillar Box, 55  
PiP, 29  
PiP List, 29  
PiP Swap, 29  
Play, 27, 35  
Play List, 4, 36, 40  
Playback Numeric Function, 37  
Playback Position Jump, 37  
Polarity, 21  
Positioner, 18, 19  
Positioner Command, 18, 19  
Positioner Setting, 18–20  
Power Saving in Standby Mode, 56  
Pr, 11  
Proxy Server, 54

## **Q**

QAM Mode, 23

## **R**

R, 11  
Recall, 4, 46  
Record Device, 38  
Recording Option, 36  
Recording Stop Message, 37  
Recordings, 7  
Rename, 40  
Reset configuration data, 58  
Reset service data, 58  
Resolution, 5  
RS-232C, 8

## **S**

Satellite, 16, 18–20  
Satellite Search, 20  
Schedule, 7, 35  
Screen Change Effect, 57

- Search event name, 27
- Search Mode, 21
- Search Type, 20, 22, 23
- Seek Time, 48
- Select Operator, 21
- Series Record, 27, 34
- Service Change, 57
- Service List Manager, 6, 31, 32
- Service preview, 25
- Service Search, 20
- Set East (soft) Limit, 19
- Set Favorites, 32, 33
- Set West (soft) Limit, 19
- Settings, 6
- Simple Service List, 57
- Skip Services, 32
- Sleep Mode, 31, 55
- Software Upgrade, 59
- Sound Level, 28
- Sound Mode, 28, 56
- Start MHW-Epg Automatically, 28
- Start Type, 44
- STB, 4
- Storage, 7
- Storage Check, 40
- Storage Manager, 7, 39
- Store Satellite Position, 18
- Store system data, 58
- Subtitle, 4, 28
- Subtitle Language, 53
- Subtitle Language2, 53
- Symbol rate, 21, 23
- Sync Player, 51
- System, 57
- System Information, 59

- System Recovery, 58
- System restore to factory default, 58
- System restore to stored position, 58

## T

- T Apps, 51
- Teletext, 4, 29
- Teletext Language, 53
- Terrestrial Search, 22
- Time Calibration, 21
- Time Setting, 27, 31, 55
- TimeShift Device, 38
- TimeShift Duration, 37
- TimeShift Start, 37
- Torrent, 51
- Transfer All System data to USB storage, 58
- Transfer Service data to USB storage, 58
- Transmission, 22
- transponder, 14
- Tuner, 16, 18–20
- TUNER 1, 9
- TUNER 2, 9
- Tuner Connection, 16, 18, 19
- TV, 4
- TV Aspect Ratio, 55
- TV Only, 20, 23
- TV Portal+, 50
- TV Type, 55
- TV/Radio, 5
- Type, 35

## U

- Unicable, 17
- Unicable Setting, 17
- Up/Down Key, 56

USALS, 19  
User, 40  
User Font File, 53

## **V**

Video Output Mode, 56  
Video PID, 22  
View only filtered list, 26  
Volume Bar Display Time, 56

## **W**

Wake Up Mode, 31, 55  
Weather, 50, 54  
Webzeal, 45

## **Y**

Y, 11  
YouTube, 7  
YouTube Location, 48  
YouTube Picture Quality, 48

## **Z**

Zapping Mode, 56



---

This product is under continuous development. Due to changes or improvements, some descriptions and illustrations in this guide may differ slightly from the actual product.